


User Manual

Dishwasher

XS 63A4M4B

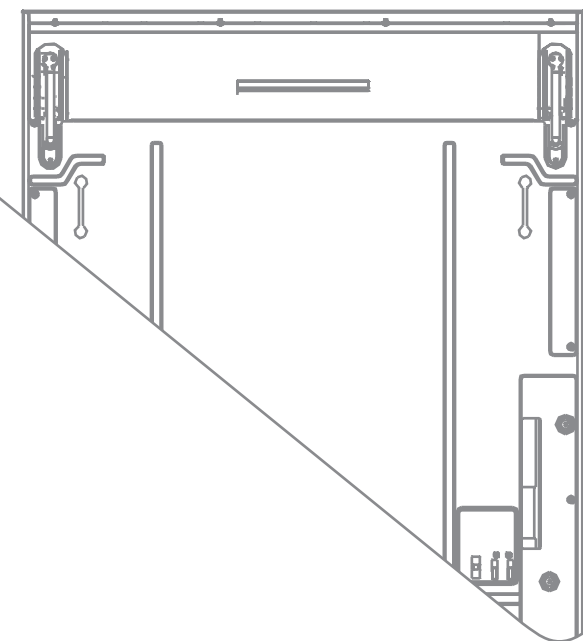

Safety and warnings	2
First use	6
Loading suggestions.....	9
Wi-fi connection.....	10
Wash programs	12
Setting a wash	13
Delayed start	15
Keylock	16
Active hygiene	17
Preferences	18
Water softening system	20
Detergent	22
Rinse aid	24
Racking Features	25
Maintenance	27
Troubleshooting	31
Fault codes	35
Standards Test	36
Technical Data	37

Intended Use

The appliance is designed for domestic use inside the house, or in similar applications such as staff kitchen areas in working environments, farm houses, by clients in hotels, motels or other residential environments, and bed and breakfast environments. It is not intended for commercial or industrial use. Do not use it for purposes other than that for which it was designed.

Changes or modifications to the device are not allowed. Unintended use may cause hazards and loss of warranty claims.

Standards and Directives

This product meets the requirements of all applicable EC directives with the corresponding harmonised standards, which provide for CE marking.

Read and save this guide

When using your Dishwasher, follow basic precautions, including the following:

General

- ▶ The information in this guide must be followed to minimise the risk of fire or explosion or to prevent property damage, personal injury or loss of life.
- ▶ Use the Dishwasher only for its intended function as described in this guide.
- ▶ This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential environments
 - bed and breakfast environments.
- ▶ Use only detergents or rinse aid recommended for use in a domestic dishwasher and keep them out of reach of children. Check that the detergent dispenser is empty after the completion of each wash program.
- ▶ When loading items to be washed, locate sharp items so that they are not likely to damage the Dishwasher and load sharp knives with the handle up to reduce the risk of cut injuries.
- ▶ Do not touch the filter plate in the Dishwasher base during or immediately after use, as it may be hot.
- ▶ Do not operate your Dishwasher unless all enclosure panels are properly in place.
- ▶ Do not tamper with the controls.
- ▶ Do not abuse, sit on, stand in or on the door or dish rack of the Dishwasher.
- ▶ The door should not be left in the open position since this could present a tripping hazard.

- ▶ The foldaway cup racks are designed to support cups, glasses and kitchen utensils. Do not lean on or use the foldaway cup racks to support your body weight.
- ▶ To reduce the risk of injury, do not allow children to play in or on the Dishwasher.
- ▶ Under certain conditions, hydrogen gas may be produced in a hot water heater system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the Dishwasher, turn on all hot water taps and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- ▶ Remove the door to the washing compartment when removing an old Dishwasher from service or discarding it.
- ▶ Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the Dishwasher when the door is open.
- ▶ The Dishwasher must be used with the filter plate, filter, and spray arms in place. To identify what these parts are refer to 'Maintenance'.
- ▶ If the Dishwasher is not being used for long periods of time, turn the electricity and water supply off.
- ▶ Cleaning and maintenance shall not be done by children without supervision.
- ▶ Take care not to load dishware items so they prevent the door from closing.
- ▶ Household appliances are not intended to be used by children. Children of less than 8 years old must be kept away from the appliance unless continuously supervised. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and they understand the hazards involved. Children being supervised not to play with the appliance.
- ▶ If a dishwasher cleaner is used, we recommend running a wash program with detergent immediately afterward to prevent any damage.
- ▶ The Dishwasher is designed for washing normal household utensils. Items that are contaminated by petrol, paint, steel, iron debris, corrosive, acidic or alkaline chemicals are not to be washed in the Dishwasher.
- ▶ Do not wash plastic items unless they are marked dishwasher safe or equivalent. For plastic items not marked, check the manufacturer's recommendations.
- ▶ Avoid washing containers with glued on labels. Labels removed during a wash cycle may cause damage to the wash system
- ▶ This product contains two light sources of energy efficiency class <F>

Installation


- ▶ This Dishwasher must be installed and located in accordance with the Installation instructions before it is used. If you did not receive Installation instructions with your Dishwasher, you can order them by calling your Authorised Repairer or download them from our local Haier website, listed on the back cover.
- ▶ Installation and service must be performed by a Haier trained and supported service technician.
- ▶ If the power supply cord is damaged, it must be replaced by a Haier trained and supported service technician or a qualified trades person in order to avoid a hazard.
- ▶ Ensure the Dishwasher is secured to adjacent cabinetry using the brackets provided. Failure to do so may result in an unstable product, which may cause damage or injury.
- ▶ Do not operate this appliance if it is damaged, malfunctioning, partially disassembled or has missing or broken parts, including a damaged power supply cord or plug.
- ▶ Do not store or use petrol, or other flammable vapours and liquids in the vicinity of the Dishwasher.
- ▶ Connect to a properly rated, protected and sized power supply circuit to avoid electrical overload.
- ▶ Ensure the power supply cord is located so that it will not be stepped on, tripped over or otherwise subject to damage or stress.
- ▶ Do not install or store the Dishwasher where it will be exposed to temperatures below freezing or exposed to weather.
- ▶ Do not use an extension cord or a portable electrical outlet device (e.g. multi-socket outlet box) to connect the Dishwasher to the power supply.
- ▶ This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- ▶ This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or Haier trained and supported service technician if you are in doubt as to whether the appliance is properly grounded.
- ▶ Do not modify the plug provided with the appliance; if it will not fit the outlet, contact a Haier trained and supported service technician or qualified electrician.
If the Dishwasher is installed as a permanently connected appliance, this appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

Maintenance

- ▶ Disconnect the appliance from the power supply before any cleaning or maintenance.
- ▶ When disconnecting the appliance pull the plug rather than the power supply cord or junction of cord to avoid damage.
- ▶ Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this guide. We recommend contacting a Haier trained and supported service technician or Customer Care.
- ▶ Keep the floor around your appliance clean and dry to reduce the possibility of slipping.
- ▶ Keep the area around/underneath your appliance free from the accumulation of combustible materials, such as lint, paper, rags and chemicals.

- ▶ Ensure the installer has completed the 'Final checklist' in the Installation instructions.
- ▶ Read this guide, taking special note of the 'Safety and warnings' section.
- ▶ Remove all internal and external packaging and dispose of it responsibly. Recycle items that you can.

Dishwasher overview

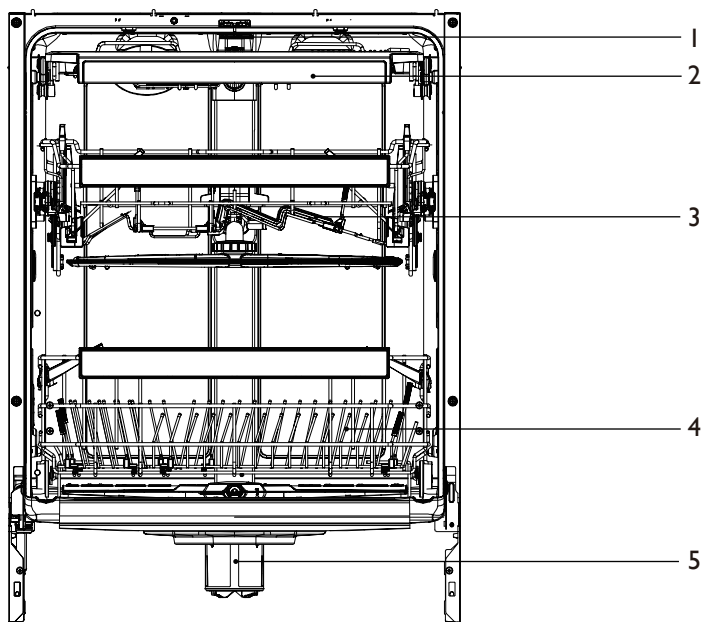


Control panel features

- | | |
|------------------------------------|----------------|
| 1 Spray arms | 4 Lower Basket |
| 2 Cutlery/Utensil tray | 5 Filter |
| 3 Upper basket (adjustable height) | |

Not shown: control panel, detergent/rinse aid dispensers (located inside door).

Control panel overview

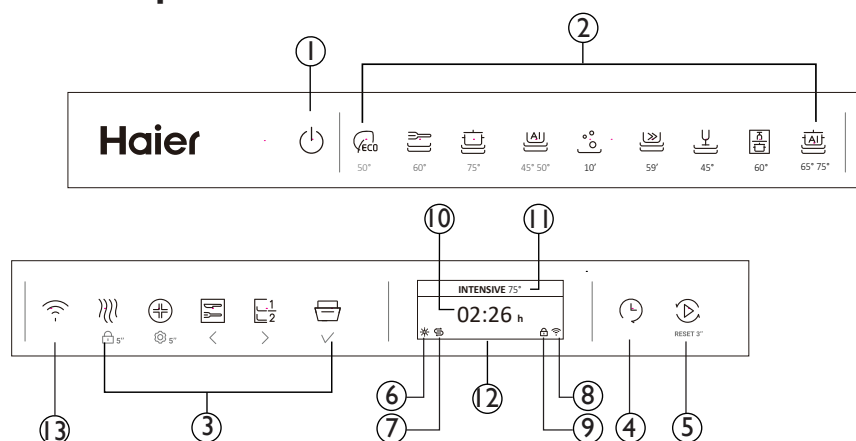

Control panel features

- | | | |
|-------------------------|-----------------------|------------------------|
| 1 Power button | 6 Rinse aid indicator | 11 Temperature display |
| 2 Wash program selector | 7 Salt indicator | 12 Time display |
| 3 Wash modifier display | 8 Wifi indicator | 13 Wifi button |
| 4 Time delay setting | 9 Key lock | |
| 5 Start | 10 Program display | |

Floor light

Use the external floor light to check if there is a wash running while the dishwasher door is closed.

Floor light logic	
NO LIGHT	No wash running
TIME FORMATE h:mm	Wash running
SLOW FLASHING	Wash paused/door open
TIME FORMAT XX:H	Delayed start set
FAULT CODE FAST FLASHING	Dishwasher has a fault

Dishware

The combination of high temperatures and dishwasher detergent may cause damage to some items. Refer to the manufacturer's guidance or wash by hand if in doubt.

Cutlery & silverware

Rinse cutlery and silverware immediately after use to prevent tarnishing. Silver should not come into contact with stainless steel, mixing these can cause staining. Remove silver cutlery from the dishwasher and hand dry immediately.

Aluminium

Aluminium can be dulled by detergent. The degree of change depends on the quality of the detergent or aluminium.

Other metals

Iron and cast iron can rust and stain other items. Copper, pewter and brass tend to stain.

Woodware

Woodware is generally sensitive to heat and water. Regular use in the dishwasher may cause deterioration over time.

Glassware

Most glassware is dishwasher safe. Crystal, very fine and antique glassware may etch and develop a cloudy appearance.

Plastics

Some plastics may change shape or colour with hot water. Refer to the manufacturer's guide. Dishwasher safe plastic should be weighed down so it does not flip and fill with water or fall through the base rack during the wash.

Decorated items

Most modern china patterns are dishwasher safe. Antique items, those with a pattern painted over the glaze, gold rims or hand painted china may be more sensitive to machine washing.

Glued items

Certain adhesives are softened or dissolved in machine washing.

Water hardness

Hard water is water with a high concentration of minerals such as calcium and magnesium. It can be detrimental to the performance of your dishwasher and parts can fail over time. Glassware washed in hard water will become cloudy over time and dishes will become spotted or covered in a white film. Water hardness varies by geographical location. If you live in a hard water area, we recommend fitting a water softener to the household water supply.

If your home has hard water

- Refer to 'Powdered detergent quantity recommendations'.
- Use rinse aid. We recommend you raise the rinse aid setting to help improve wash performance. Refer to 'Preferences' for details.


Use a dishwasher cleaner/descaler regularly, or whenever you notice a build-up of limescale deposits in your dishwasher.

If your home has soft or softened water

- Avoid using too much detergent.


When loading your Dishwasher ensure items are placed so water coming from the rotating spray arm below can reach all areas. Wash performance will be reduced if it can't.

Your dishwasher can hold up to a maximum of 16 place settings.

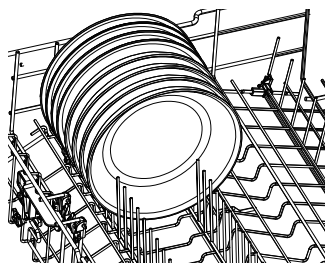

Ensure

- Lower and middle spray arms can rotate freely.
- Tall items do not obstruct the upper spray arm.
- Glass and other fragile items are stable.
- All dish openings are facing downwards.
- Plates are evenly spaced.
- All sharp objects are located securely to avoid injury or damage to the product.

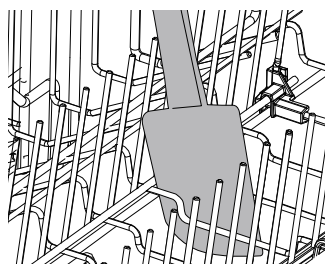

Avoid

- Overcrowding.
- Any protrusions below the racks and basket that may prevent spray arm rotation.
- Any protrusions at the front of the dishwasher.
- Blocking water from any items on the foldaway cup racks.

This appliance is equipped with **Wi-Fi** technology that allows the machine to be remote controlled via an app.

APPLIANCE PAIRING (ON APP)

- Download the **hOn** App on your device by framing the following QR code:



or by the link:
go.haier-europe.com/download-app

The hOn App is available for devices running both Android and iOS, both for tablets and for smartphones.

To discover all the details of the Wi-Fi features, explore the app menus in DEMO mode.

- Make sure the router is turned on and your smartphone/tablet is connected to your home **Wi-Fi** network.

The frequency of the home Wi-Fi network has to be set on the 2.4 GHz band. You can not configure the machine if your home network is set to the 5 GHz band.

- Turn the **BLUETOOTH** on your smartphone/tablet (if available).
- Open the App, create the user profile (or log-in if it is already created previously) and pairing the appliance following the instructions on the smartphone display.

Successful pairing

- If pairing with the App is successful, the **"Wi-Fi"** light will be on steady.
- The display will show **"CONNECTED"**, followed by **"REMOTE CONTROL ON"**.
- You can now control the dishwasher from the App.

Unsuccessful pairing

If pairing with the App fails (or 5 minutes have passed):

- The **"Wi-Fi"** indicator will turn off.
- **"TRY AGAIN"** will appear on the product display.
- The dishwasher will not be connected.
- Repeat the pairing procedure from the App.

Reset Wi-Fi

In the event of problems or changes to the home router settings (e.g., change of network name/password, internet supplier, etc.), you must perform the pairing procedure once more, removing the product from the App, or changing the Wi-Fi network credentials from the appliance settings in the App.

ENABLING REMOTE CONTROL

After correctly pairing the appliance with the app (see APPLIANCE PAIRING section), whenever you want to use...

- Make sure the router is turned on and connected to the Internet.
- Load the dishwasher, load the detergent, close the door.
- Switch on the dishwasher with the **"ON/OFF"**  button.

- Short press the "Wi-Fi"  button. The display will show "CONNECTING..." followed by "REMOTE CONTROL ON".

- Close the door.

For built-in models, do this before turning the appliance on.

- You can now control the dishwasher from the App.

DISABLING REMOTE CONTROL

- To exit remote control, press the "Wi-Fi"  button on the appliance again.

- The "Wi-Fi" indicator will blink very slowly.

- **With cycle not in progress:**

- The message "REMOTE CONTROL OFF" appears on the product display. It will be possible to manually select a new cycle.

- **With cycle in progress:**

- The message "REMOTE CONTROL OFF" appears on the product display. The display will then show the remaining time. The cycle will be completed without having control from the App.

An alternative way to exit remote control.

- Press the "START/RESET"  button for 3 secs.

If there is a running cycle, it will be cancelled, and the machine will exit **REMOTE CONTROL** mode.

The "Wi-Fi" indicator light will blink slowly. It is now possible to set a new wash cycle from the control panel.

- Press the "ON/OFF"  button for 3 secs (or power off).

If there is a cycle in progress, it will be paused and the appliance will exit **REMOTE CONTROL** mode.

When switching it on again, the "Wi-Fi" indicator light will blink slowly and any cycle in progress will continue from the point of interruption.

Opening the door, any REMOTE CONTROL will be disabled. To resume control from the App, close the door.

Wi-Fi connection indicator light

Indicates the connection status of the product to the home **Wi-Fi** network. It can be:

- **FIXED ON:** remote control enabled.
- **VERY SLOW BLINKING:** remote control disabled.
- **SLOW BLINKING:** reset of the **Wi-Fi** network (during pairing on the App).
- **FAST BLINKING:** appliance associated with the App but no **Wi-Fi** connection. Check the correct functioning of the router or the changed home **Wi-Fi** credentials (Network name and / or password). In this case, update the settings within the App, following the instructions on the smartphone.

Wash programs

Your dishwasher has a number of wash programs designed to suit your needs. Selecting the most appropriate cycle for each load will help ensure the best wash results.

Wash program	Program description
ECO (default)  50°	Standard and most efficient program in terms of combined energy and water consumption for normally soiled dishes.
UNIVERSAL  60°	Intended for everyday lighted soiled dishes. This is your daily reference program.
INTENSIVE  75°	For heavily soiled pans and any other items that require a strong and effective washing. Perfectly designed for very dirty dishes.
SMART AI  45° 50°	An automatic program that selects the most efficient and effective duration and temperature depending on the load and soil levels.
PRE-WASH  10°	Short cold pre-wash for items that are stored in the dishwasher until you are ready to wash a full load.
RAPID  59°	This is a full load program designed to wash and dry in less than an hour, maintaining high wash quality performance.
GLASS CARE  45°	For lightly soiled and heat sensitive crockery and glassware such as wine glasses
FLEX ZONE  60°	A cycle studied for a real independent wash: a delicate one for crystals on the upper basket and an intensive on lower one for heavy items
SMART AI PRO  65° 75°	An automatic program for heavy soil and big load that automatically selects the most efficient and effective duration and temperature of the cycle depending on load & soil level.


After setting a wash program, you can also select a wash modifier. Not all modifiers can be combined with all wash programs. 1/2 LOAD can be used in combination with the other modifiers.

+WIFI  Connect to WIFI for remote operations	+EXTRA DRY  Increases the final rinse temperature and the length of the drying phase.	+HYGIENE  Raises the water temperature during the rinse phase to sanitize.
+CUTLERY BOOST  Increases the water pressure in the third rack for heavily soiled pots and pans.	+HALF LOAD  Click different times to select different area clarity mode.	+ AUTO DOOR  Open door during drying phase for better drying performance

Setting a wash


EN

1

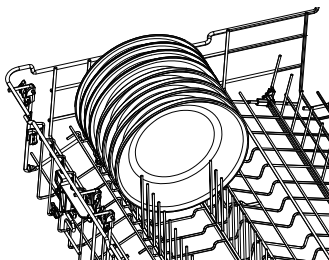


Remove all food scraps from dishware before carefully loading into the dishwasher. Ensure the spray arms are free from any obstructions and rotate freely.

2

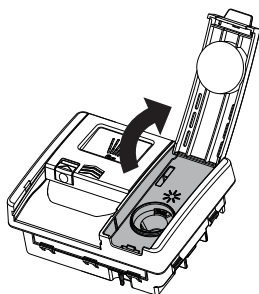

If the rinse aid indicator is illuminated, fill the rinse aid dispenser. Refer to 'Rinse aid' for additional guidance.

3

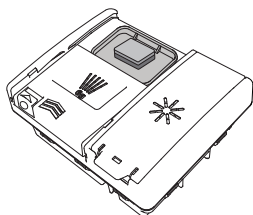

Add detergent to the dispenser and close the cover. Tablets can be placed in the detergent dispenser.

4




1

2


selection state. Select a wash program.

5

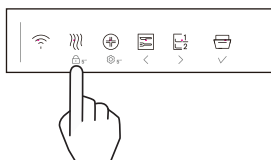


Select a wash modifier if required.

6

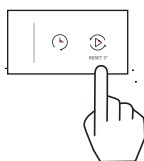


Press ► to start the wash and close the door. If the door is not closed within 30 seconds the wash will be cancelled.

7

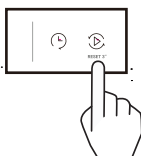

Open the door slowly at any point during the wash to pause.
Press and hold RESET to cancel the wash.

8

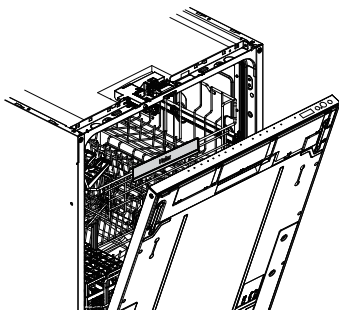


After the wash the door will automatically open slightly to assist with drying.*
For best results, unload dishes once cooled.



* This feature can be disabled, refer to 'Preferences'.

Set your dishwasher to start later in the day and run a selected wash program. DELAYED START can be set after a wash program has been selected and can be set for up to 12 hours.

Setting Delayed Start

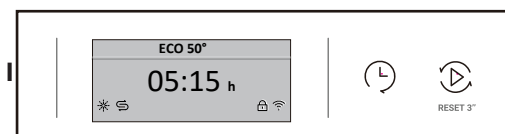


Add detergent and select a wash program, and wash modifier if required. Press to enter DELAYED START and increase the delay time.

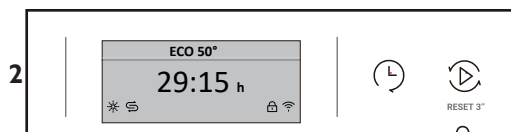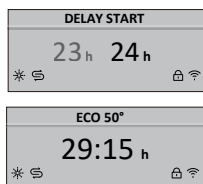

Press to confirm and promptly close the door. The wash program will begin at the end of the countdown, provided the door is closed.

Open the door to pause DELAYED START. Press to continue and promptly close the door.


Cancelling Delayed Start

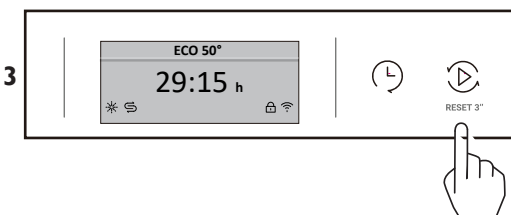

Open the door and press and hold RESET.

Lock the dishwasher controls for cleaning or to prevent unintended use.


Locking the controls

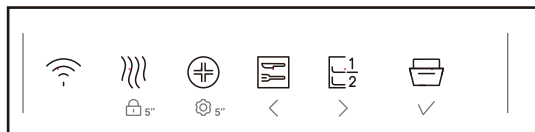

Press and hold  for 5 second.

Note: Before locking the controls, running the program. After locking, except for the unlocking operation, other functions are not available.

Unlocking the controls

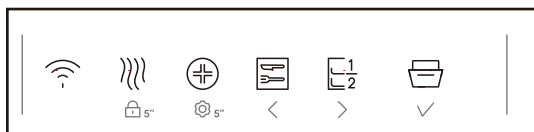

Open the door to pause the wash.
Press and hold  for 5 seconds to unlock.


Using active hygiene

The disinfection and cleaning modifier adjusts the cleaning procedure to meet the conditions required by the relevant disinfection function, so as to disinfect. When running disinfection, the cleaning procedure is monitored to ensure that these conditions are met.

Other cleaning procedures may not reach the temperature required for disinfection. Refer to the table on the previous page for cleaning procedures with available disinfection functions.

For sanitization to occur, the temperature of the water needs to reach 70°C. Ensure all items are dishwasher safe before running the active hygiene modifier.

If the wash is interrupted or the water supply is turned off during the program, the heating conditions for sanitization may not be met. You may need to run the program again.

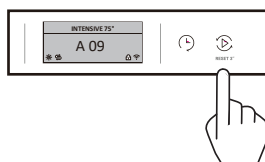

If sanitization has been successful

The wash will finish as normal.


If sanitization has not been successful

An alert will sound and a code will show on the display.


1. Check if the water supply has been turned off or the wash program interrupted.
2. Press and hold RESET to stop the beeping, then again to clear the alert code.
3. Reset active hygiene and run the cycle again.

For more information, refer to 'Fault codes'.




You can adjust any of the below settings prior to starting a wash cycle.

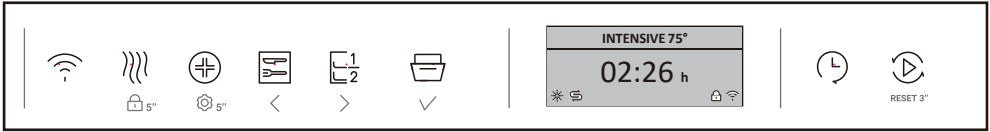

 Press and hold key  for 5 seconds, and the display will be as follows.







   Enter the attribute setting interface ,
press key “ < ” and “ > ” to select attributes.
There a total 11 attributes.



...

    Press “ ✓ ” for each attribute setting, and press key
“ < ” and “ > ” I to make a selection, and press key “ ✓ ” to
exit the attribute setting interface



Following page shows all the settings you can set.

Preferences

EN

Option	Description	Default	Settings display
LANGUAGE	Adjust language showing	English	ENGLISH, ITALIANO, FRANÇAIS, ESPAÑOL, DEUTSCH, PORTUGUÊS, NEDERLANDS, ČESKÝ, POLSKA, HRVATSKA, SLOVENSKO, ЕЛАННІКН, SRPSKI, SLOVENSKÝ, ROMÂNĂ, БЪЛГАРСКИ, MAGYAR, РУССКИЙ, ҚАЗАҚ, УКРАЇНСЬКИЙ, SVENSKA, SUOMI, DANSK, NORSK, TÜRKCE
INTERIOR LIGHT	Controls the switch state of the interior light.	ON	ON OFF
INFO LIGHT	Controls the switch status of the drop lamp.	ON	ON OFF
SOUND	Adjusts tone settings. When set to 0 fall tones will be silenced except fault alerts.	0	0 1 2 3
WATER SOFTENER ADJUSTMENT	Adjust according to the following page.	H5	H0 H1 H2 H3 H4 H5 H6 H7 H8
RINSE AID	Controls the amount of rinse aid dispensed. Refer to 'Rinse aid' for further details.	rA5	rA- rA1 rA2 rA3 rA4 rA5 rA6
MEMORY FUNCTION	Remember the running status of the program when powering broken	ON	ON OFF
WELCOME SCREEN	Activate or disable the startup welcome interface	ON	ON OFF
FACTORY DEFAULT	Restore factory settings	ON	RESET CANCEL

To ensure good washing results, the dishwasher requires soft water. Hard water can be detrimental to the performance of your dishwasher. Over time, glassware washed in hard water will become opaque and dishes will become spotted or covered in a white film. Using white film. Using very hard water can cause dishwasher parts to fail over time. Salt can improve the situation.

Adjusting the water softening system

The amount of salt dispensed can be set in H1 and H9 stages, depending on the hardness of your water.

1. Find out about the hardness value of your tap water. Your water utility company will help you with this.

2. Setting can be found in the water hardness table.

Identify the local water hardness


Water hardness				Water softener adjustment
German degrees (°dH)	French degrees (°fH)	Mmol/l	Clarke degrees	electronic
31-50	54-89	5.4-8.9	39-63	H8
22-30	38-53	3.8-5.3	27-38	H7
17-21	29-37	2.9-3.7	21-26	H6
13-16	22-28	2.2-2.8	16-20	H5 ¹⁾ *
11-12	18-21	1.8-2.1	13-15	H4
9-10	15-17	1.5-1.7	11-12	H3
7-8	11-14	1.1-1.4	8-10	H2
0-6	0-11	0-1.1	0-7	H1 ²⁾ *
-	-	-	-	H0 ³⁾ *

* Remark

- 1) Factory default setting for powder detergent.
- 2) Recommended setting for combi detergent tablets.
- 3) Indicator for Salt is off.

Using special salt


As soon as the low salt indicator is lit on the control panel ,salt should be topped up.Always refill with special salt immediately before switching on the appliance.This ensures that overrun special salt solution is immediately washed out and does not corrode the rinsing tank.

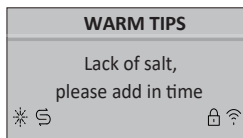

Top up the salt as follows:

⚠ CAUTION

Only use dishwasher salt. Other products can cause damage to the appliance!
Any spilled salt causes corrosion.Run a programme after each refill.

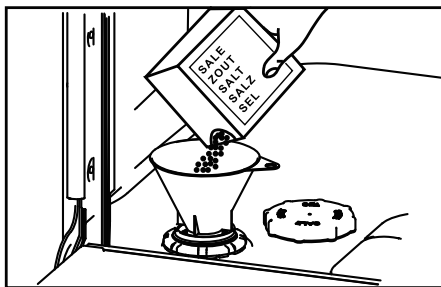

1. Turn the cap clockwise to open the salt container.
2. Fill with 1 litre of water into the salt container.
3. Fill the tank up with specific salt (water overflows).
4. Remove spilled salt from the opening area.
5. Turn the cap counter-clockwise to close the salt container.

WARNING: Dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children and infirm persons away from the dishwasher when it is open. Check the powdered detergent dispenser is empty after each wash.

Unsuitable detergents


These types of detergent are not suitable and may damage your dishwasher or lead to a service call that is not covered by warranty:

- ▶ Liquid detergents
- ▶ Laundry detergents
- ▶ Hand washing liquids
- ▶ Soaps
- ▶ Disinfectants

Using powdered detergent


For powdered detergent quantities, refer to the following 'Powdered detergent quantity recommendations' table and the detergent manufacturer's guidance.

1

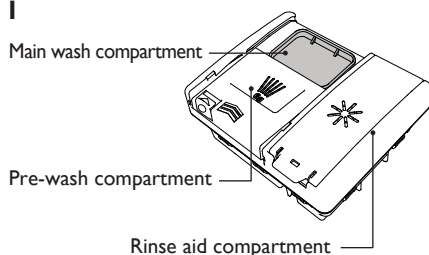

Check that the dispenser is empty and dry. Add powdered detergent or tablets to the detergent dispenser.

2

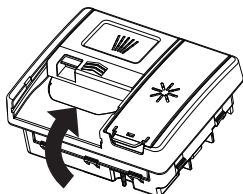

Remove any excess detergent then slide the cover closed. It will click into place. If required, add additional detergent to the pre-wash compartment on top of the dispenser.

When washing heavily soiled dishware in hard water, more detergent may be required. Refer to 'Powdered detergent quantity recommendations'.

Powdered detergent quantity recommendations

- Use the table below to determine the optimal powdered detergent quantity for each wash program.
- If you have hard water in your area, more detergent may be required.


Wash program	Pre wash compartment	Main wash compartment
ECO (default)  50°	Full	2/3
UNIVERSAL  60°	Full	2/3
INTENSIVE  75°	Full	2/3
SMART AI  45° 50°	Full	1/2 - 2/3
PREWASH  10°	None	None
RAPID 59'  59°	Full	1/2
Glassware  45°	Full	2/3
Flex zone wash  60°	Full	2/3
Smart AI Pro  65° 75°	Full	2/3

Rinse aid provides a streak-free finish to glass and dishware as well as preventing metal from tarnishing. We recommend using a liquid rinse aid regularly for optimal drying results.


The rinse aid dispenser is located on the inside of the door next to the detergent dispenser.

Using rinse aid


The amount of rinse aid dispensed in each wash may need to be adjusted to suit your water conditions. Refer to 'Preferences' and 'Water hardness' for guidance. Rinse aid is not required if tablet has it already built into it.

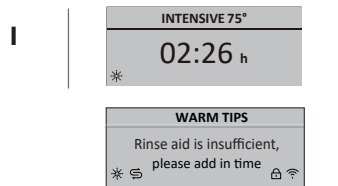

When the rinse aid level is low, the rinse aid indicator on the control panel will light up to remind you to refill the dispenser.

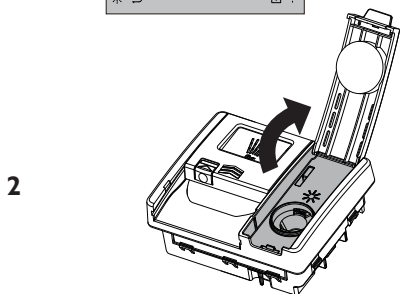


Lift the cover open and pour rinse aid into the opening.
Do not fill past the MAX line. Take care not to spill any onto the door or detergent bucket.

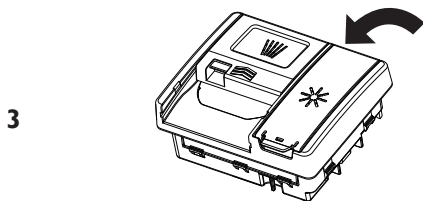

Close the cover, ensuring it clicks shut.


Any accidental spillages into the dishwasher or detergent bucket must be cleaned up immediately. Spilt rinse aid may result in excessive foaming. A service call relating to these errors will not be covered by warranty.

Upper baskets

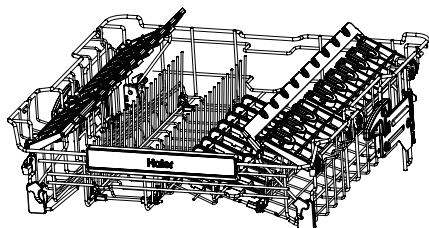

- The upper basket is designed to hold items like glasses, cups, saucers, plates, small bowls and shallow pans.

Foldable cup racks


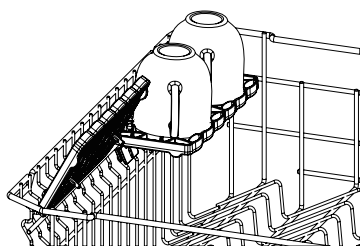


Adjust the height to suit or fold out of the way to make space for other items. Use the notches to support wine glass stems.

To adjust height


1. Fold up to unlock.
2. Adjust the height to suit by sliding up or down.
3. Fold back down to lock in position.

Height adjustment of the upper basket.

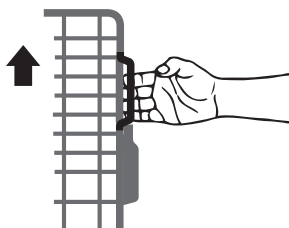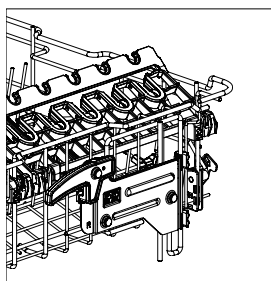

TO RAISE BASKET


Grip these handles both sides and lift basket upwards until it clicks in place.

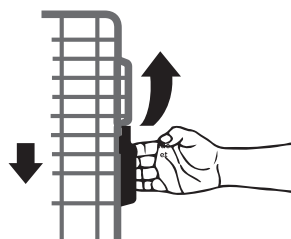

TO LOWER BASKET



Pull the levers up on both sides and carefully lower the basket.

Foldable tine rack

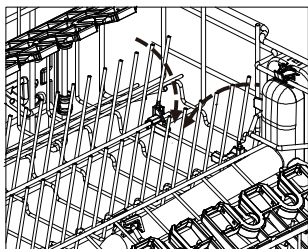


Some tines can be folded down as needed to make space for other items.

Foldable glass holder

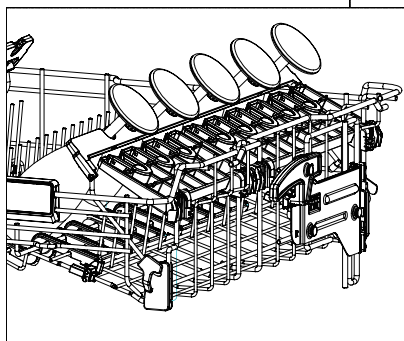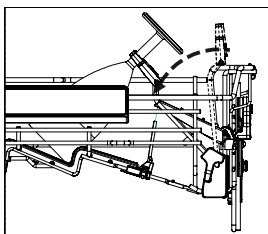

Fold down the glass holder to make space for glass.

Cutlery/Utensil tray

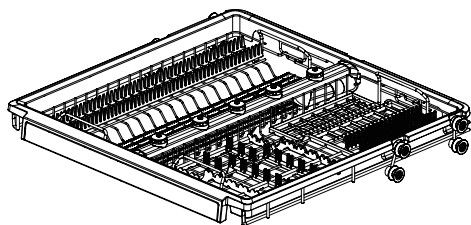


Use the tray to secure cutlery and utensils.

Place cutlery into the notches to secure.

Place larger utensils in the middle of the tray.

Slide side sections to the middle to create more space for items below.

Disconnect the dishwasher from the power supply and allow it to cool before undertaking any cleaning or maintenance.

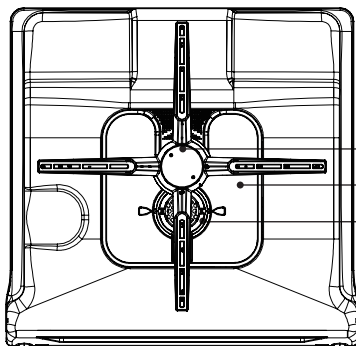

Features

- 1 Filter
- 2 Filter plate
- 3 Lower spray arm
- Not shown: middle and upper spray arms

Cleaning surfaces

Wipe with a damp cloth and dry using a lint-free cloth. We do not recommend using the following cleaning aids as they may damage the surfaces:

- Plastic or stainless steel scouring pads
- ▶ Abrasive, solvent, household cleaners
- ▶ Acid or alkaline cleaners

- Hand washing liquids or soap
- ▶ Stainless steel cleaners or polishes
- ▶ Laundry detergents or disinfectants

Cleaning the filter, spray arms and filter plate


We recommend that the drain filter and filter plate are removed and cleaned once a month or whenever there is evidence of food particles. The spray arms in normal use should require cleaning less frequently. Lower and middle spray arms can be shaken to remove any foreign material, cleaned in hot water, then rinsed in clean water.

The dishwasher must be used with the filter plate, drain filter and spray arms correctly in place. If using a dishwasher cleaner or descaler, refer to manufacturer instructions.


Extended periods of disuse

If your dishwasher is not going to be used for some time we recommend turning off the power and water supply, leaving it clean and empty with the door ajar. When using your dishwasher for the first time after a long period away, we recommend pouring 3 cups of water into the dishwasher before use. This helps lubricate components that may have dried out during disuse.

Removing and cleaning the filter

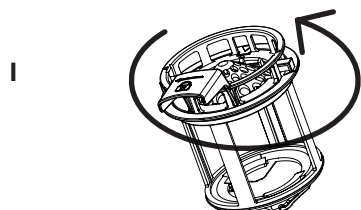


 Twist the filter anti-clockwise to release. Lift to remove.




Separate the filter cap from the base by pressing the release buttons and lifting.


Do not attempt to remove the filter by force as this may cause damage.
Clean under hot water and rinse thoroughly.

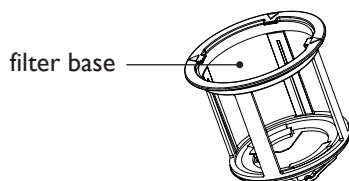

Replacing the filter

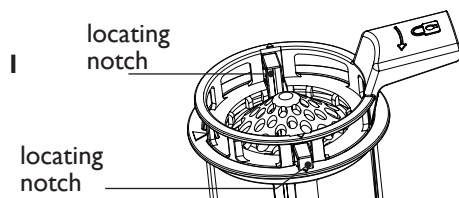


Align the filter cap with the notch on the filter base. Ensure that the buckle structure is in place.

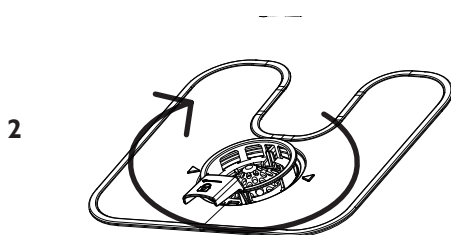


Place the drain filter back into the dishwasher base. Rotate 2 clockwise to click into place.

Removing and cleaning the filter plate

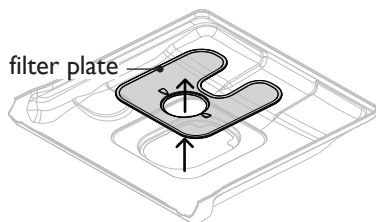


With the filter removed, carefully lift the filter plate up and out.
Clean under hot water and rinse thoroughly.

Replacing the filter plate

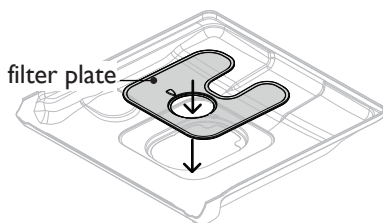



Slot the filter plate under the locating clips at the rear of the drain and push firmly back into place. Ensure the filter plate is flush with the dishwasher base.

Cleaning the upper spray arm

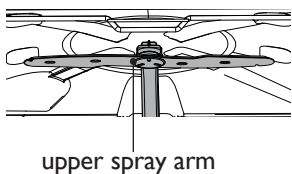


Do not remove the upper spray arm for cleaning. Clean with a small, plastic-bristled brush. If heavily soiled or blocked use a dishwasher cleaner/descaler. Follow the manufacturer's instructions.

 Cleaning the middle spray arm

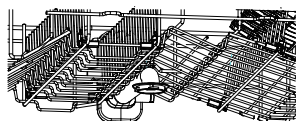

To remove the middle spray arm, turn the locking nut clockwise to release. Rinse the spray arm thoroughly under running water, then refit.


Cleaning the lower spray arm

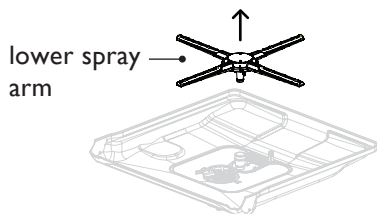


To remove the lower spray arm, lift it from the base of the dishwasher.
Rinse the spray arm thoroughly under running water, then refit.
Ensure the arm rotates freely when refitted.

Winterizing (cold climates)

If the Dishwasher is installed in a cold climate where temperatures fall below zero, we recommend winterizing.

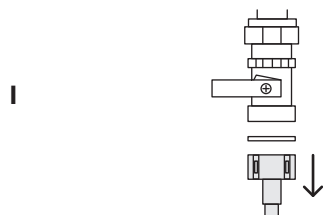


Turn off the water supply.
Disconnect the drain hoses from the sink drain pipe and the water inlet pipe from the water valve.

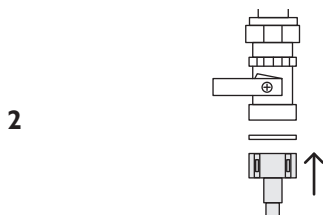

Drain the water from the hoses, inlet pipe and water valve, using a bucket or pan to collect the water.

Reconnect the water inlet pipe to the water valve and hoses to the sink drain pipe.

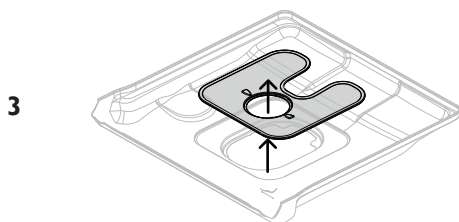

Remove the drain filter and the filter plate.
Use a sponge to remove any remaining water from underneath before replacing.

Problem	Possible cause	What to do
Dishwasher will not start	No power.	Ensure the dishwasher is plugged in and the power supply is turned on at the wall.
	The door is not properly closed.	Close the door.
	▷ has not been pressed.	Press ▷.
	Water tap not turned on.	Ensure water is connected and turned on.
	Blocked strainer in water inlet hose.	Check the strainer and clean if necessary – it is located where the water inlet hose screws into the tap.
Lower spray arm rotates with difficulty	Spray arm holes are blocked by small items or food particles.	Clean the spray arm. Refer to 'Maintenance' for instructions.
Cover of detergent dispenser cannot be closed	Detergent compartment has been overfilled.	Remove detergent until the cover can be closed.
	Detergent dispenser is clogged with remnants of detergent.	Wipe dispenser out with a damp cloth. Dry the dispenser before adding detergent.
Remnants of detergent stuck inside dispenser	Compartment was damp when filled with detergent.	Wipe dispenser out with a damp cloth. Dry the dispenser before adding detergent.
	Utensils are blocking the detergent dispenser from opening.	Ensure there are no large utensils positioned in a way that will stop the dispenser cover from opening when the dishwasher door is closed.
Water remains inside dishwasher after wash has ended	Blocked drain connection.	Check that drain connection is free from blockages.
	Drain hose is crimped, bent, or blocked.	Check the drain hose and straighten if needed.
	Pump is jammed.	Call your Haier Authorised Service Centre or Customer Care.
	Filter(s) blocked.	Clean the filter(s). See 'Maintenance' for instructions.
Display flashing while Keylock is on	This is normal. The display remains on although the buttons are disabled.	No action required.

Problem	Possible cause	What to do
Foaming	Incorrect amount or type of detergent used.	Refer to 'Detergent' or consult the detergent manufacturer's instructions.
	Too much egg in the wash load.	Increase the amount of detergent.
	Rinse aid dosage level too high.	Decrease the rinse aid dosage.
	Rinse aid spills not wiped up.	Ensure that all rinse aid spills are wiped up when they occur.
Knocking or rattling sound during wash	Spray arm knocking against dishes.	Pause the wash and rearrange dishes. Refer to 'Setting a wash' and 'Loading suggestions'.
	Dishes have been stacked incorrectly.	
	Unsuitable wash program for load selected.	Select the appropriate wash program for the load. Refer to 'Wash programs'.
	Soils were too heavily baked on.	Dishes may need soaking.
Unclean dishes	Spray arm(s) unable to rotate.	Ensure no items are obstructing the spray arm path.
	Basket/rack incorrectly loaded.	Refer to 'Loading suggestions'.
	Filter plate or filter incorrectly installed.	Refer to 'Maintenance'.
	Detergent put in the wrong compartment.	Refer to 'Wash programs' and 'Detergent'.
	Excessive food not removed from dishes before loading.	Scrape all food scraps off dishes before loading.
	Unsuitable detergent.	Only use powdered or tablet detergent designed for domestic dishwashers.
	Not enough detergent.	Refer to 'Detergent' for recommended quantities. You may need to adjust these to suit your particular load and the hardness of your water supply.
	Spray arm holes are blocked.	Clean the spray arm(s). Refer to 'Maintenance' for instructions.
	The filters are blocked.	Clean the filters. Refer to 'Maintenance' for instructions.

Problem	Possible cause	What to do
Plastic items are discoloured (e.g. stain left by tomato sauce)	Not enough detergent, not pre-rinsed.	Pre-rinse plastic dishes before placing in the dishwasher and/or add more detergent. Alternatively, using the Rinse program after adding dishes may minimise staining.
The dishwasher stops suddenly during the wash	Power or water supply has been interrupted.	Check the power and water supplies.
White stains are left on dishes glasses ; have a milky appearance	Not enough detergent.	Refer to 'Detergent' for recommended quantities. You may need to adjust these to suit the hardness of your water supply.
	Rinse aid dosage too low.	Increase rinse aid dosage. Refer to 'Rinse aid'.
	Rinse aid dosage too low.	Increase rinse aid dosage. Refer to 'Rinse aid'.
Dishes, cutlery have not dried	Items removed too soon.	After the end of the wash program, leave the door ajar and wait for several minutes to help drying.
	Rinse aid dispenser empty. (The rinse aid indicators are lit.)	Add rinse aid. Refer to 'Rinse aid'.
Glasses have dull appearance	Rinse aid dosage too low.	Increase rinse aid dosage. Refer to 'Rinse aid'.
Tea stains or traces of lipstick have not been completely removed	Not enough detergent.	See section 'Detergent' for recommended quantities. You may need to adjust these to suit your particular load.
	Wash temperature too low.	Select a wash program for heavily soiled dishes. Refer to 'Wash programs' for information.
Traces of rust on cutlery	Cutlery is not sufficiently rustproof.	Wash by hand.
Glasses clouded and discoloured; milky coating	Hard water situation.	Increase detergent quantities.
	Glasses are not dishwasher proof.	Wash by hand.

Problem	Possible cause	What to do
Water marks left on glasses and cutlery	Rinse aid level or dosage setting is too low.	Ensure there is rinse aid in dispenser. If necessary, increase the rinse aid setting or try using a wash program with a higher temperature. Refer to 'Rinse aid' for information.
Salt Aid Indicator is lighted.	Softener salt is empty.	Fill the tank up with specific salt until full.

How do I know if there is a fault?

Your dishwasher will beep continuously and a fault code will flash in the display. There are two types of fault codes – 'F' and 'A'.

To fix a fault

First try to fix the issue and clear the code according to the steps in the following tables.

If the problem persists:

- 1 Note down the fault code.
- 2 Contact Customer Care for support or to organize a visit by a service technician. Refer to the Service and Warranty booklet for contact details.

'F' fault codes

You may be able to clear the fault by resetting the dishwasher. Follow the steps below

3 Press and hold Cancel to stop the beeping, then again to clear the fault code.

4 Wait a few seconds, then press ▷ to turn the dishwasher back on.

If the fault code has disappeared, the fault has been reset and you can continue to use your dishwasher.


'A' fault codes

Follow the steps below to try and fix the issue.

Problem	Possible cause	What to do
A10 No water	Water tap not turned on.	Ensure the water is connected and turned on. Touch to restart the dishwasher.
	Insufficient water supply pressure.	Check household water pressure.
	Water inlet hose is crimped or bent, so no or not enough water gets to the dishwasher.	Check the water inlet hose and straighten if needed. Touch to restart the dishwasher.

Wash programme	Eco
Powder detergent quantities	5g pre-wash+28.75 g main wash
Rinse aid dosage level	rA5
Maximum number of place settings	14
Height adjustment of upper basket	Ensure the upper basket is in its lower most position

Recommended loading patterns

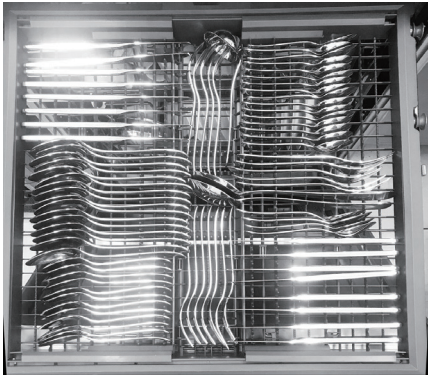

Cutlery/Utensil tray



Upper basket



Lower basket

Supplier's name or trade mark:	Haier
Supplier's address ^(b) :	No. 236, Qianwangang Road, Huangdao District, Qingdao, China
Model identifier:	XS 63A4M4B

General product parameters:

Parameter	Value	Parameter	Value	XS 63A4M4B
Rated capacity ^(a) (ps)	16	Dimensions in cm	Height	82,0
			Width	59,7
			Depth	56,0
EEI ^(a)	22,3	Energy efficiency class ^(a)	[A] ^(c)	
Cleaning performance index ^(a)	1,121	Drying performance index ^(a)	1,061	
Energy consumption in kWh [per cycle], based on the eco programme using cold water fill. Actual energy consumption will depend on how the appliance is used.	0,390	Water consumption in litres [per cycle], based on the eco programme. Actual water consumption will depend on how the appliance is used and on the hardness of the water.	9,5	
Programme duration ^(a) (h:min)	5:15	Type	[built-in]	
Airborne acoustical noise emissions ^(a) (dB(A) re 1 pW)	44	Airborne acoustical noise emission class ^(a)	[B] ^(c)	
Off-mode (W)	0,50	Standby mode (W)	0,50	
Delay start (W) (if applicable)	4,00	Networked standby (W) (if applicable)	2,00	

Minimum duration of the guarantee offered by the supplier ^(b): 24

Additional information: -

Weblink to the supplier's website, where the information in point 6 of Annex II to Commission Regulation (EU)2019/2022 ⁽¹⁾ ^(b) is found

^(a) for the eco programme.

^(b) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.

^(c) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

Information to be included in the technical documentation

PARAMETER	UNIT	VALUE
Eco programme energy consumption (EPEC) rounded to three decimal places	kWh/cycle	0,390
Standard programme energy consumption (SPEC) rounded to three decimal places	kWh/cycle	1,750
Energy Efficiency Index (EEI)	—	22,3
Eco programme water consumption (EPWC) rounded to one decimal place	l/cycle	9,5
Cleaning performance index (I_c)	—	1,121
Drying performance index (I_D)	—	1,061
Duration of the eco programme (T_t) rounded to the nearest minute	h:min	5:15
Power consumption in off-mode (P_o) rounded to two decimal places	W	0,50
Power consumption in standby mode (P_{sm}) rounded to two decimal places	W	0,50
Does standby mode include the display of information?	—	No
Power consumption in standby mode (P_{sm}) in condition of networked Standby (if applicable), rounded to two decimal places	W	2,00
Power consumption in delay start (P_{ds}) (if applicable) rounded to two decimal places	W	4,00
Airborne acoustical noise emissions	dB(A) re 1 pW	44