


USER MANUAL-E0508STR

Interface and Button Layout

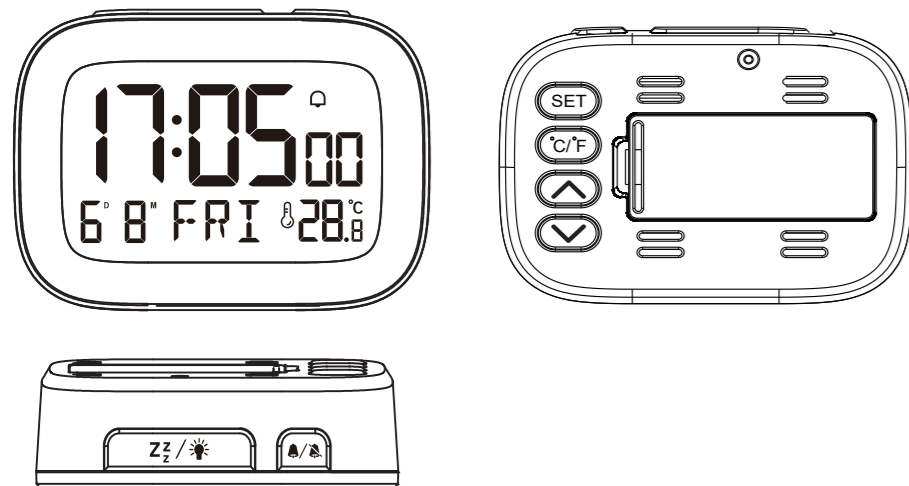

Main Functions

- 6 Buttons: SET, °C/°F, UP, DOWN, LIGHT/SNOOZE, ALARM
- 6-digit time display: hours, minutes, seconds
- Calendar tracks month, day and weekday
- 8 languages: English, German, French, Italian, Dutch, Spanish, Russian, Danish
- Indoor temperature display in °C/°F
- Current time in 12/24h
- Alarm with snooze function
- Key prompt tone
- LED backlight
- Low battery alert
- Powered by: 2*AAA batteries

Power on or Reset

When starting up or resetting, the LCD full image will be displayed for 3 seconds, and the backlight will be on for 3 seconds at the same time. After the buzzer sounds BI, it will enter the standard mode, detect the temperature.

Button Function

- In standard mode, press the “Alarm” button to turn on or off the alarm clock
- In standard mode, press and hold the “SET” button for 2 seconds to enter the time setting
- In standard mode, press and hold the “Alarm” button for 2 seconds to enter the alarm setting
- In standard mode, press the “°C/°F” button to switch between °C/°F
- In standard mode, press the “SNOOZE/LIGHT” button, the backlight will be on for 5 seconds
- When the alarm clock is ringing, press the “SNOOZE/LIGHT” button to enter the snooze mode (5 minutes), and press any other button to stop the alarm

Time Setting Function

- In standard mode, press and hold the “SET” button for 2 seconds to enter the time setting
- The setting item flashes at a frequency of 1HZ, press the “SET” button to select the setting item, the order is: 12/24HR→hour→minute→year→month→day→language→exit
- When the setting item flashes at a frequency of 1HZ, press the “UP” button to add 1, and long press the “UP” button to quickly accumulate at 8 steps/second
- When the setting item flashes at 1HZ frequency, press the “DOWN” button to decrease by 1, and long press the “DOWN” button to quickly decrease by 8 steps/second
- In setting process, if there is no operation for 30 seconds, it will automatically exit and save the current set value

Alarm Setting Function

- In standard mode, press and hold the “Alarm” button for 2 seconds to enter the alarm clock setting, the setting sequence: hour→minute→exit
- When the setting item flashes at 1HZ frequency, press the “UP” button to add 1, and long press the “UP” button to quickly accumulate at 8 steps/second
- When the setting item flashes at 1HZ frequency, press the “DOWN” button to decrease by 1, and long press the “DOWN” button to quickly decrease by 8 steps/second
- If there is no operation for 30 seconds during the setting process, it will automatically exit and save the current setting value

Alarm Function

- Alarm time is 2 minutes, snooze time is 5 minutes
- Alarm format:
 - 0-10 seconds: BI once per second 0-20 seconds: BI BI twice per second
 - 21-30 seconds: BI BI BI BI fourth per second 31-120 seconds: continuous BI BI sounds
- When the alarm is ringing, press the “SNOOZE” button to enter snooze, the number of snooze is unlimited, press any other button to stop the alarm
- When the alarm clock is turned on, is often displayed on the screen, and and flash together when snoozing

Backlight Function

- Press the “SNOOZE/LIGHT” button to turn on the backlight for 5 seconds

Indoor Temperature Detection Function

- Temperature detection range: -9.9°C~50.0°C, LL.L is displayed when the lower value is exceeded, and HH.H is displayed when the upper value is exceeded
- Detection cycle: 30 seconds

Other function

- Weekdays in 8 languages

| Language | German | English | Italian | French | Dutch | Spanish | Danish | Russian |
|-----------|--------|---------|---------|--------|-------|---------|--------|---------|
| | GER | ENG | ITA | FRE | DUT | SPA | DAN | RUS |
| SUNDAY | SON | SUN | DOM | DIM | ZON | DOM | SON | BOC |
| MONDAY | MON | MON | LUN | LUN | MAA | LUN | MAN | ПОН |
| TUESDAY | DIE | TUE | MAR | MAR | DIN | MAR | TIR | ВТО |
| WEDNESDAY | MIT | WED | MER | MER | WOE | MIE | ONS | СРЕ |
| THURSDAY | DON | THU | GIO | JEU | DON | JUE | TOR | ЧЕТ |
| FRIDAY | FRE | FRI | VEN | VEN | VRI | VIE | FRE | ПЯТ |
| SATURDAY | SAM | SAT | SAB | SAM | ZAT | SAB | LOR | СЫБ |




This marking indicated that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

When the time comes to eliminate this product, please consider the environmental impact and take it to recognized recycling facility instead of disposing it with general household waste. Take the equipment to a waste disposal site. Plastic and metal parts that are used in the construction of this appliance can be separated into pure grade which allow recycling. Ask to your service center for details. Every one of us can participate on the environmental protection.

El Corte Inglés S.A.
 Hermosilla 112 - 28009 Madrid
 España / Spain. NIF: A-28017895
 Fabricado en / Made in China
 elcorteingles.es
 clientes@elcorteingles.es

MANUAL DE INSTRUCCIONES-E0508STR

Diseño de interfaz y botones

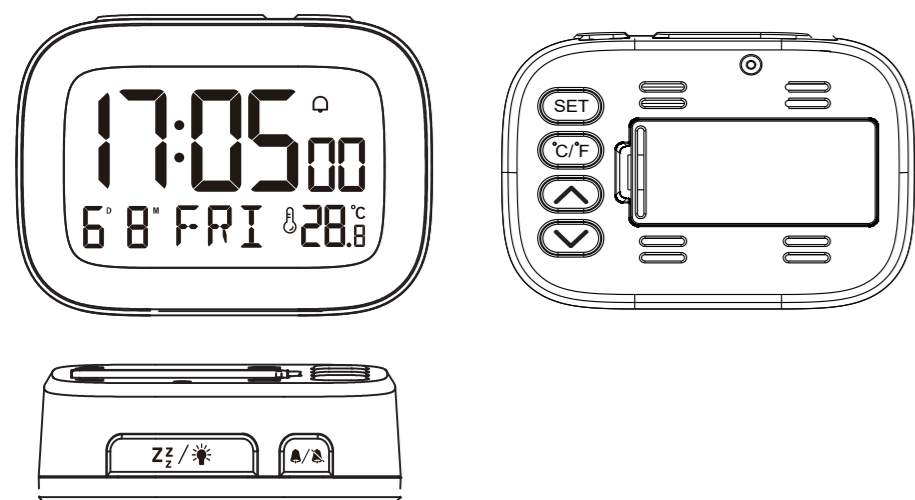

Funciones principales

- 6 botones: CONFIGURAR, °C/°F, ARRIBA, ABAJO, LUZ/DORMITAR, ALARMA
- Visualización de la hora de 6 dígitos: horas, minutos, segundos
- El calendario muestra el mes, el día y el día de la semana
- 8 idiomas: inglés, alemán, francés, italiano, holandés, español, ruso, danés
- Visualización de la temperatura interior en °C/°F
- Hora actual en 12/24h
- Alarma con función de repetición
- Botones con sonido
- Retroiluminación LED
- Alerta de batería baja
- Alimentado por: 2*pilas AAA

Encendido o reinicio

Al iniciar o restablecer, la imagen completa de la pantalla LCD se mostrará durante 3 segundos y la luz de fondo se encenderá durante 3 segundos al mismo tiempo. Después de que el timbre suene BI, ingresará al modo estándar, detectará la temperatura.

Funciones de los botones

- En el modo estándar, presione el botón "Alarma" para encender o apagar el despertador.
- En el modo estándar, presione y mantenga presionado el botón "SET" durante 2 segundos para ingresar la configuración de hora.
- En el modo estándar, presione y mantenga presionado el botón "Alarma" durante 2 segundos para ingresar a la configuración de alarma.
- En el modo estándar, presione el botón "°C/°F" para cambiar entre °C/°F
- En modo estándar, presione el botón "SNOOZE/LIGHT", la luz de fondo se encenderá durante 5 segundos.
- Cuando suene el despertador, presione el botón "DORMITAR/LUZ" para ingresar al modo de repetición (5 minutos) y presione cualquier otro botón para detener la alarma.

Configuración

- En el modo estándar, presione y mantenga presionado el botón "SET" durante 2 segundos para ingresar la configuración de hora.
- El elemento de configuración parpadea a una frecuencia de 1 HZ, presione el botón "SET" para seleccionar el elemento de configuración, el orden es: 12/24 horas → hora → minuto → año → mes → día → idioma → salir
- Cuando el elemento de configuración parpadea a una frecuencia de 1 HZ, presione el botón "ARRIBA" para agregar 1 y mantenga presionado el botón "ARRIBA" para acumular rápidamente 8 pasos/segundo.
- Cuando el elemento de configuración parpadea a una frecuencia de 1 HZ, presione el botón "ABAJO" para disminuir en 1 y mantenga presionado el botón "ABAJO" para disminuir rápidamente en 8 pasos/segundo.
- En el proceso de configuración, si no se realiza ninguna operación durante 30 segundos, saldrá automáticamente y guardará el valor establecido actual.

Configuración de alarma

- En el modo estándar, presione y mantenga presionado el botón "Alarma" durante 2 segundos para ingresar a la configuración del despertador, la secuencia de configuración: hora→minuto→salir
- Cuando el elemento de configuración parpadea a una frecuencia de 1 HZ, presione el botón "ARRIBA" para agregar 1 y mantenga presionado el botón "ARRIBA" para acumular rápidamente 8 pasos/segundo.
- Cuando el elemento de configuración parpadea a una frecuencia de 1 HZ, presione el botón "ABAJO" para disminuir en 1 y mantenga presionado el botón "ABAJO" para disminuir rápidamente en 8 pasos/segundo.
- Si no se realiza ninguna operación durante 30 segundos durante el proceso de configuración, saldrá automáticamente y guardará el valor de configuración actual.

Funcion de alarma

- El tiempo de alarma es de 2 minutos, el tiempo de repetición es de 5 minutos
- Formato de alarma:
- 0-10 segundos: BI una vez por segundo 10-20 segundos: BI BI dos veces por segundo
- 21-30 segundos: BI BI BI BI cuarto por segundo 31-120 segundos: sonidos BI BI continuos
- Cuando suene la alarma, presione el botón "SNOOZE" para activar la repetición, el número de repetición es ilimitado, presione cualquier otro botón para detener la alarma.
- Cuando el despertador está encendido, a menudo se muestra en la pantalla y parpadean juntos cuando se pospone

Funcion luz

- Presione el botón "SNOOZE/LIGHT" para encender la luz de fondo durante 5 segundos.

Función temperatura

- Rango de detección de temperatura: -9,9 °C ~ 50,0 °C, se muestra LL.L cuando se excede el valor inferior y se muestra HH.H cuando se excede el valor superior
- Ciclo de detección: 30 segundos

Otras funciones

- días de la semana en 8 idiomas

| Language | German | English | Italian | French | Dutch | Spanish | Danish | Russian |
|-----------|--------|---------|---------|--------|-------|---------|--------|---------|
| | GER | ENG | ITA | FRE | DUT | SPA | DAN | RUS |
| SUNDAY | SON | SUN | DOM | DIM | ZON | DOM | SON | BOC |
| MONDAY | MON | MON | LUN | LUN | MAA | LUN | MAN | ПОН |
| TUESDAY | DIE | TUE | MAR | MAR | DIN | MAR | TIR | BTO |
| WEDNESDAY | MIT | WED | MER | MER | WOE | MIE | ONS | CPE |
| THURSDAY | DON | THU | GIO | JEU | DON | JUE | TOR | ЧЕТ |
| FRIDAY | FRE | FRI | VEN | VEN | VRI | VIE | FRE | Пят |
| SATURDAY | SAM | SAT | SAB | SAM | ZAT | SAB | LOR | Суб |



Esta marca indica que este producto no debería eliminarse junto con otros residuos domésticos en toda la UE. Para prevenir posibles daños al medio ambiente o a la salud humana, el producto debe ser reciclado correctamente para promover la reutilización sostenible de materiales. Para devolver el dispositivo utilizado, por favor utilice el retorno y collection systems o póngase en contacto con el establecimiento donde se adquirió el producto. Pueden tomar este producto para el reciclaje seguro ambiental.

Cuando sea el momento de desechar el producto, por favor considere el impacto medioambiental y llévelo a un punto adecuado para reciclar. Los plásticos y metales utilizados en la construcción de este aparato pueden ser separados para permitir su reciclaje. Pregunte a su centro más cercano para más detalles. Todos nosotros podemos participar en la protección del medio ambiente.

El Corte Inglés S.A.
 Hermosilla 112 - 28009 Madrid
 España / Spain. NIF: A-28017895
 Fabricado en / Made in China
 elcorteingles.es
 clientes@elcorteingles.es