

## Q203 USING MANUAL

### Charge It

- On the right earcup, carefully plug the Type-C cable into Type-C charging port, and connect the other end of the cable to either a computer USB port or to a USB-compatible car or wall charger.
- Solid red LED light will appear to indicate when the headphone is charging.
- When charging is complete, the LED light will turn Blue.
- Charging time is approximately 2.5 hours.

### Turn It On/Off

- Press & hold the power button on the right side of the headphone for about 3 seconds until the LED indicator light turns on.
- Press & hold the power button again for 4 seconds until the LED light turns off.

### Pair & Connect With New Device

- Power on the wireless headphone(refer to the "Turn It On" section).
- To pair the headphone with a new device, the Red and blue LED light blink to indicate it is ready to be paired with your device.
- On your Wireless-enabled smartphone,tablet or media player, navigate to the Wireless settings menu,turn on the Wireless feature,and search for new devices After a few seconds you will see "INVES Q203" listed.
- Tap this model to select it. Solid blue LED light indicate your device has successfully paired.
- With your previously paired device's Wireless turned on and in range, The headphone will automatically reconnect to the last Wireless device it was connected to.

**NOTE:If the headphone is not used within 5 minutes,the headphones will automatically turn off to save battery.**

### Play

- Connect your device to the headphone via wireless (refer to the "Pair & Connect" section)
- Open your favorite music app and press play.
- Control the music, track & volume from your device,or control the music & volume,Press the Power button once to play/pause music & answer calls, press it twice to redial the last number called on your phone,and press & hold it to reject an incoming call.
- El audio,incluyendo music, games, videos, and notifications will be routed through the headphone.

### Button Function


- Press + area(refer to product Diagram) to next track.
- Press - area(refer to product Diagram) to previous track.
- Press & Hold + area(refer to product Diagram) to turn up the volume.
- Press & Hold - area(refer to product Diagram) to turn down the volume.

**NOTE:Press gesture and touching the correct area will offer you fluently experince**

### Troubleshooting

- No power
  - Recharge your wireless headphone using the Type-C cable.
- Music is not playing over Wireless
  - Make sure your Wireless device has A2DP profile. Check if both devices are paired and connected over Wireless,Restart the headphone to reconnect your Bluetooth device.
- Wireless device will not reconnect with the headphone
  - Navigate to your Wireless settings menu on your Wireless device,tap "INVES Q203" , and select "Forget" .
  - Now follow the steps to pair your device again,Or, press & hold the power button on the headphone (while powered on) to disconnect the headphones from any connected devices. Then follow the steps to reconnect your device.

### Product Diagram

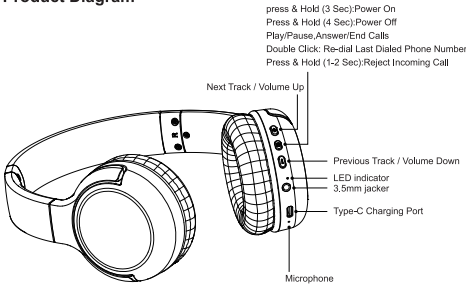

### SPECIFICATIONS

|                                       |                        |
|---------------------------------------|------------------------|
| Wireless Version                      | V5.3                   |
| Working Distance Range                | 10M                    |
| Frequency Range                       | 2,402GHz-2,480GHz      |
| Built-in rechargeable Lithium battery |                        |
| Input                                 | 5 V  500mA             |
| Battery                               | 3.7V  300mAh           |
| Charging Time                         | about 2.5 hours        |
| Talking/Music time                    | about 30 hours         |
| Standby Time                          | about 180 days         |
| Driver                                | 2 X 40mm               |
| Impedance                             | 64 Ohm S.P.L.(at 1KHz) |
| Direct current                        |                        |

Battery Caution:Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire o the like.



To prevent possible hearing damage, do not listen at high volume levels for long periods.



When the time comes to eliminate this product, please consider the environmental impact and take it to recognized recycling facility instead of disposing it with general household waste. Take the equipment to a waste disposal site. Plastic and metal parts that are used in the construction of this appliance can be separated into pure grade which allow recycling. Ask to your service center for details. Every one of us can participate on the environmental protection.



Batteries and accumulators should never be disposed of with other household waste. If you want to get rid of a battery or accumulator, deposit them in the containers enabled for this purpose in the points of sale or in the nearest disposal site or local waste facility.



Indoor use only



Class III equipment

Caution: Replacement of a battery with an incorrect type that can defeat a safeguard (such as fire, explosion etc). Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

### DECLARACIÓN UE DE CONFORMIDAD



Nosotros, El Corte Inglés con domicilio social en C/ Hermosilla 112, 28009 Madrid (España) y N.I.F. A28017895 declaramos bajo nuestra responsabilidad que el producto con referencia 45856916,45857856 and 45857864:



a la que hace referencia esta declaración es conforme con los requisitos esenciales y otras disposiciones relevantes de la Directiva RED (2014/53/EU).

El producto cumple con las siguientes normas y/u otros documentos normativos:

Article 3.1(a) Safety  
EN IEC 62368-1:2020+A11:2020

Article 3.1(a)Health  
EN 62479: 2010  
EN 50663: 2017

Article 3.1(b)EMC  
ETSI EN 301 489-1 V2.2.3 (2019-11)  
ETSI EN 301 489-17 V3.2.4 (2020-09)

Article 3.2 Radio  
ETSI EN 300 328 V2.2.2 (2019-07)

EL CORTE INGLÉS S.A., conservará el expediente técnico completo que estará disponible a previa solicitud.

Firmado por y en nombre de El Corte Inglés S.A.:  
En Madrid, 13/11/2023  
Antonio García Montero  
Director Dpto. Calidad y Seguridad de Producto  
EL CORTE INGLÉS S.A.  
Hermosilla 112  
28009 Madrid, España.  
clientes@elcorteingles.es  
NIF: A-28017895  
Fabricado En China  
GECI SN:38594976026

Firma:

## Q203 MANUAL DE USO

### Cómo cargar los auriculares

- Conecte con cuidado el cable USB- C en el puerto de carga micro tipo-c del auricular derecho. Conecte el otro extremo del cable al puerto USB de un ordenador o a un puerto USB compatible de un vehículo o toma de pared.
- El indicador LED rojo se encenderá fijo para indicar que los auriculares se están cargando.
- Cuando estén completamente cargados, el LED se iluminará en azul.
- El tiempo de carga es de aproximadamente 2,5 horas

### Cómo encender/apagar los auriculares

- Mantenga presionado el botón de encendido ubicado en el lateral derecho de los auriculares durante unos 3 segundos hasta que el LED indicador se ilumine.
- Mantenga presionado de nuevo el botón de encendido/apagado durante 4 segundos hasta que el LED se apague.

### Cómo emparejar y conectar a un nuevo dispositivo

- Encienda los auriculares inalámbricos (consulte la sección Cómo encender los auriculares).
- Para emparejar los auriculares, el LED azul parpadeará para indicar que están listos para asociarse a su dispositivo.
- En su smartphone, tableta o reproductor con función inalámbrica, desplácese por el menú de configuración, active la opción de conexión inalámbrica y busque nuevos dispositivos.
- Al cabo de unos segundos verá INVES Q203 en la lista.
- Pulse sobre el mismo para seleccionarlo. Un LED azul fijo le indicará que su dispositivo se ha emparejado.
- Los auriculares se volverán a emparejar automáticamente al último dispositivo inalámbrico asociado si este se encuentra encendido y dentro del alcance.

**NOTA: Si no se utilizan los auriculares durante 5 minutos, se apagarán automáticamente para ahorrar la energía de la batería.**

### Reproducción

- Conecte su dispositivo a los auriculares de modo inalámbrico (consulte la sección Cómo emparejar y conectar)
- Abra su aplicación favorita de música y presione el botón de reproducción.
- Controle la música, la pista y el volumen desde su dispositivo, o desde el control de música y volumen. Presione el botón de encendido una vez para reproducir/pausar música y responder llamadas. Presiónelo dos veces para volver a marcar el último número Llame a su teléfono, y presione y sosténgalo para rechazar una llamada entrante
- Llamada a su teléfono, mantenga presionado para rechazar una llamada entrante
- Todo el audio, incluyendo música, juegos, videos y notificaciones, será desviado hacia los auriculares.

### Función de los botones


- Presione el área + (ver diagrama del producto) para ir a la pista siguiente.
- Presione el área - (ver diagrama del producto) para ir a la pista anterior
- Mantenga presionada el área + (ver diagrama del producto) para aumentar el volumen.
- Mantenga presionada el área - (ver diagrama del producto) para disminuir el volumen

**NOTA: El gesto de presionar y tocar el área correcta le ofrecerá la experiencia más fluida.**

### Solución de problemas

- No se encienden
  - Recargue los auriculares inalámbricos con el cable USB-C.
- La música no suena por medio inalámbrico
  - Compruebe que su dispositivo inalámbrico posee el perfil A2DP. Verifique si ambos dispositivos están emparejados y conectados de modo inalámbrico. Reinicie los auriculares y vuelva a conectarlos al dispositivo inalámbrico.
- El dispositivo inalámbrico no se reconecta a los auriculares
  - Desplácese por el menú de configuración inalámbrica de su dispositivo inalámbrico, pulse "INVES Q203" y seleccione "Forget" (Olvídate). Ahora, siga los pasos para emparejar su dispositivo de nuevo. O, mantenga presionado el botón de encendido en los auriculares (mientras está encendido) para.
  - desconectar los auriculares de cualquier dispositivo al que estén conectados. Luego, siga los pasos para volver a conectar su dispositivo de nuevo.

### Diagrama del producto

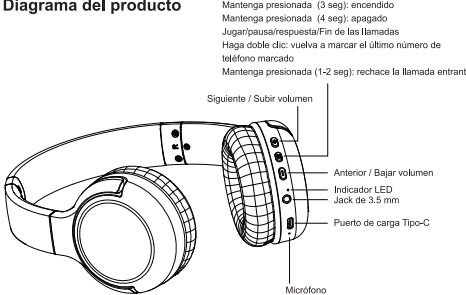

### ESPECIFICACIONES

|                                        |                                                |
|----------------------------------------|------------------------------------------------|
| Versión inalámbrica                    | V5.3                                           |
| Distancia de alcance de funcionamiento | 10M                                            |
| Respuesta en frecuencia                | 2,402GHz-2,480GHz                              |
| Batería de litio integrada recargable  |                                                |
| Entrada                                | 5 V  500mA                                     |
| Batería                                | 3.7V  300mAh                                   |
| Tiempo de carga                        | unas 2,5 horas                                 |
| Tiempo de habla/música                 | unas 30 horas                                  |
| Tiempo de standby                      | unas 180 días                                  |
| Controlador                            | 2 X 40mm                                       |
| Impedancia                             | 64 Ohm S.P.L (nivel de presión sonora (a 1KHz) |
| Corriente directa                      |                                                |

Precauciones con la batería: Existe un riesgo de explosión si la batería se reemplaza por otra del tipo incorrecto. Deshágase de las baterías agotadas según se indica en las instrucciones.

El aparato no debe ser expuesto a goteos o salpicaduras y no se deben colocar objetos con líquidos, tales como jarrones, sobre el mismo. Las pilas (paquete de pilas o pilas instaladas) no deben ser expuestas al calor excesivo como al sol, fuegos o similares.



Para evitar posibles daños al oído, no escuchar a un volumen alto durante largos periodos de tiempo.



Cuando llegue el momento de eliminar este producto, considere el impacto ambiental y llévele a una instalación de reciclaje reconocida en lugar de desecharlo junto con la basura doméstica. Lleve el producto a un lugar de eliminación de desechos. Las piezas de plástico y metal que se utilizan en la construcción de este aparato se pueden separar en grado puro que permite su reciclaje. Para más información, consulte con su centro de servicio. Todos podemos participar en la protección del medioambiente.



Las pilas o acumuladores nunca deben depositarse con el resto de los residuos domésticos. Si usted desea deshacerse de la pila o acumulador, deposítelos bien en los contenedores habilitados a tal efecto en los puntos de venta, bien en el punto limpio o instalación municipal de recogida selectiva de residuos más próxima.



Indoor use only



Class III equipment

Caution: Replacement of a battery with an incorrect type that can defeat a safeguard (such as fire, explosion etc). Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

### EU DECLARATION OF CONFORMITY



We, El Corte Inglés with address C/ Hermosilla 112, 28009 Madrid (España) and N.I.F. A28017895 declare under our sole responsibility that the product with reference 45856916,45857856 and 45857864:



to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the Directive 2014/53/EU, relating to RED (Radio Equipment Directive).

This product is in conformity with the following standards and/or other normative documents:

Article 3.1(a) Safety  
EN IEC 62368-1:2020+A11:2020

Article 3.1(a)Health  
EN 62479: 2010  
EN 50663: 2017

Article 3.1(b)EMC  
ETSI EN 301 489-1 V2.2.3 (2019-11)  
ETSI EN 301 489-17 V3.2.4 (2020-09)

Article 3.2 Radio  
ETSI EN300 328 V2.2.2 (2019-07)

EL CORTE INGLÉS S.A. retains the complete technical file which will be available upon request.

Signed for and on behalf of El Corte Inglés S.A.:  
Madrid, 13/11/2023  
Antonio García Montero  
Product Quality and Safety Department Manager  
EL CORTE INGLÉS S.A.  
Hermosilla 112  
28009 Madrid, España.  
clientes@elcorteingles.es  
NIF: A-28017895  
Fabricado En China  
GECI SN:38594976026

Signature:

### WARRANTY TEXT

Royal Decree-Law 1/2007, of 16 November, grants goods of a durable nature a legal guarantee of 3 years.

Damage or faults caused by the following are excluded from the guarantee: - Incorrect installation (voltage, gas or water pressure, electrical or water connections), re installations or housings made by the consumer without applying the correct instructions, - Accidental causes such as falls, knocks, contact with liquids, insertion of foreign bodies, or any other cause of force majeure, - Negligent, inadequate or nondomestic use, such as appliances installed in hairdressers, bars, restaurants, hotels, etc. - Manipulation by technical services other than the official ones of the brand, - Corrosion and/or rust caused by the normal wear and tear of the appliance or accelerated by adverse environmental conditions. - Use of accessories or consumables which are not the original ones of the brand.

The following are also excluded from the guarantee: - Components exposed to wear and tear due to normal use (light bulbs, seals, insulators, tubes, drains, etc.), from the sixth month, save manufacturing defects, - Non-electromechanical components, aesthetic, plastic, glass or folding components, soap dishes, shelves, grilles, etc. - Conservation services, cleaning, unblocking, change of direction of door, re-moval of foreign bodies, obstructions, recalibration or fine-tuning, etc. - Computer products: Elimination of viruses, restoration of programs for this reason, or the reinstallation of the hard disk because it has been wiped.