

Instrucciones de montaje · Assembly Instructions

CP-949 LUXE

5027887

ES • IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS.
LÉASE ATENTAMENTE.

EN • IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR • ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.


IT • IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.

PT • IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ANTENTAMENTE.

R • ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТАЙТЕ.

A • الامعتسالا لبق مادي ج أرقا. ةعج ارم لل ظفح ا. م.

CN • 重要事项：保留以备将来参考，请仔细阅读。

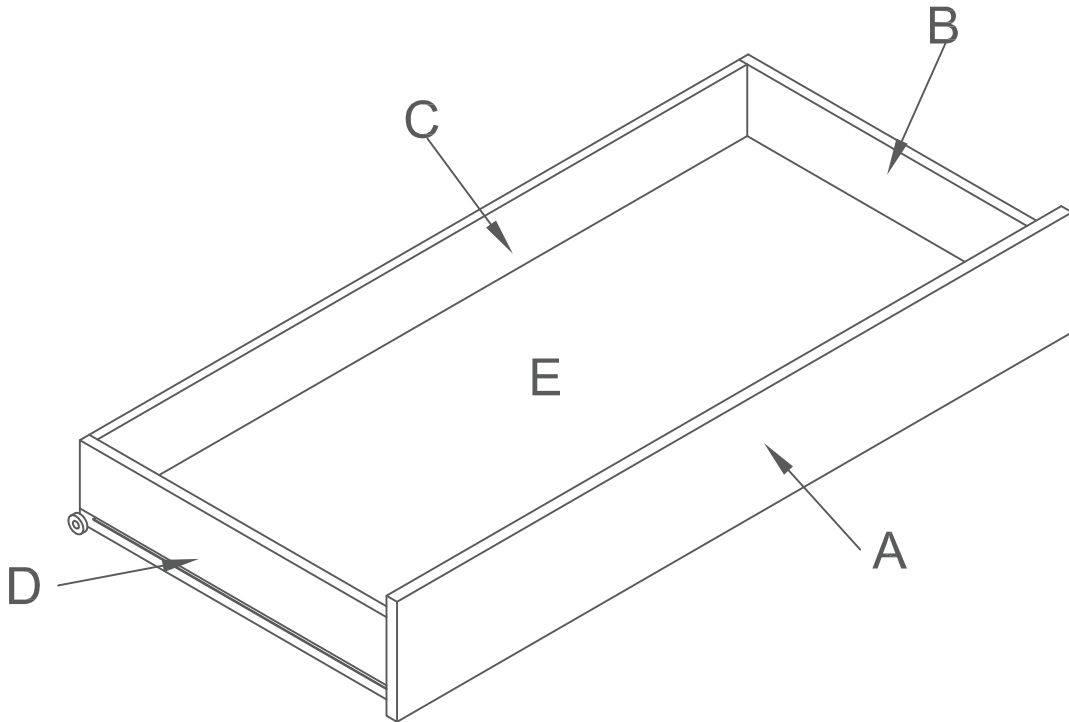



**No usar destornillador eléctrico.
Utilizar herramienta manual.**
Do not use an electric screwdriver.
Use a hand tool.



ES




EN




FP




C01235
GX4
(6,3*11)



C00193
HX4
(M6X30)




C06307
JX1



C06306
IX1




C01538
KX4




C04790
LX2




C01537
GX4

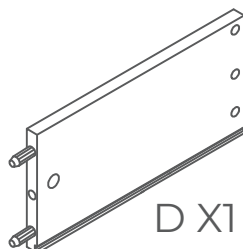


D X1

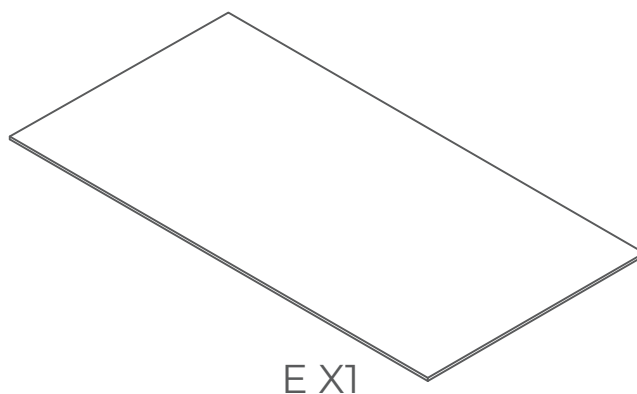


E X1

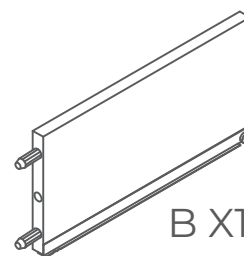


B X1

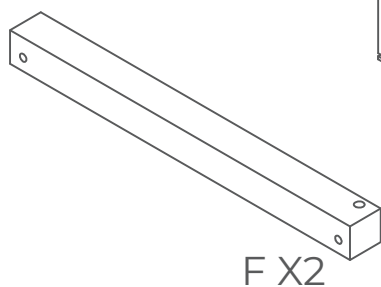




F X2

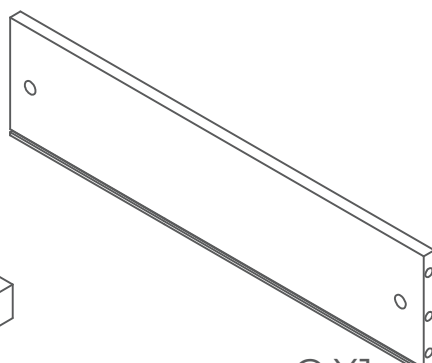




C X1

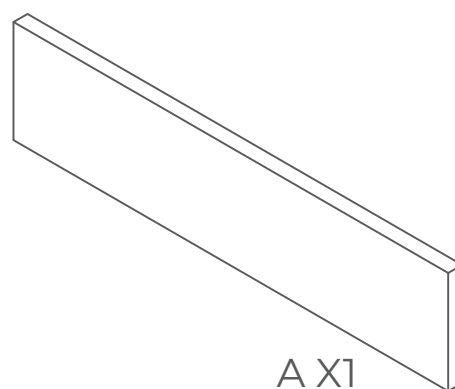


A X1

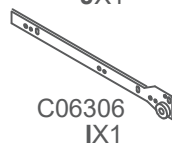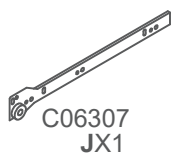

C01235
GX4
(6,3*11)

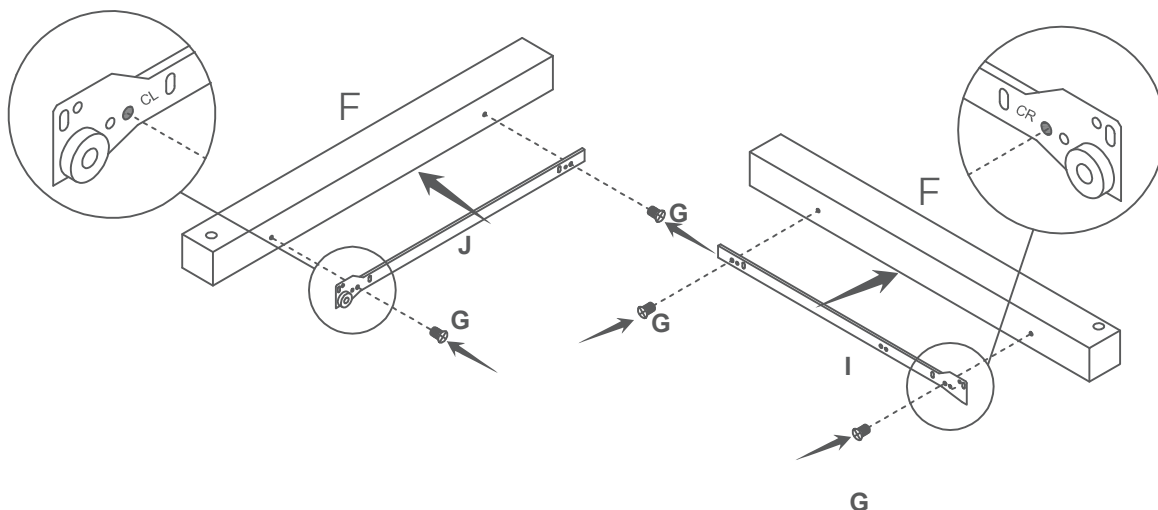


C00193
HX4
(M6X30)

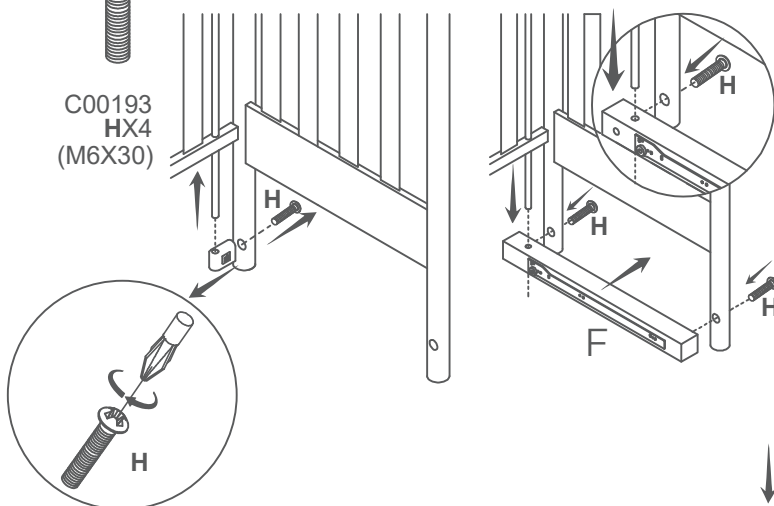


INLCUED IN
DOLCE MAGIC
PACKAGING


5034347



C06545
B*X4

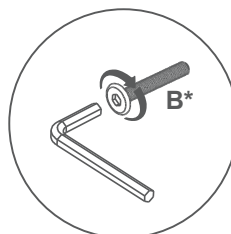





DOLCE MAGIC

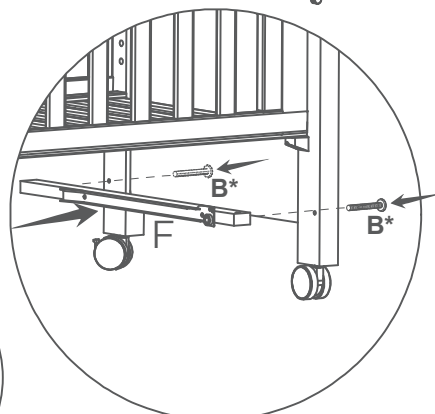




C01537
GX4



C01538
KX4

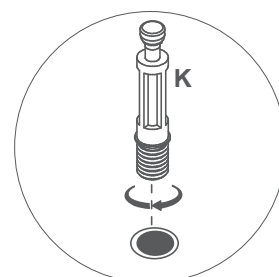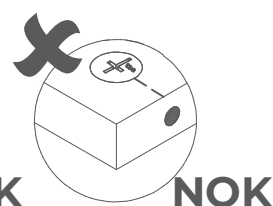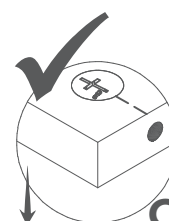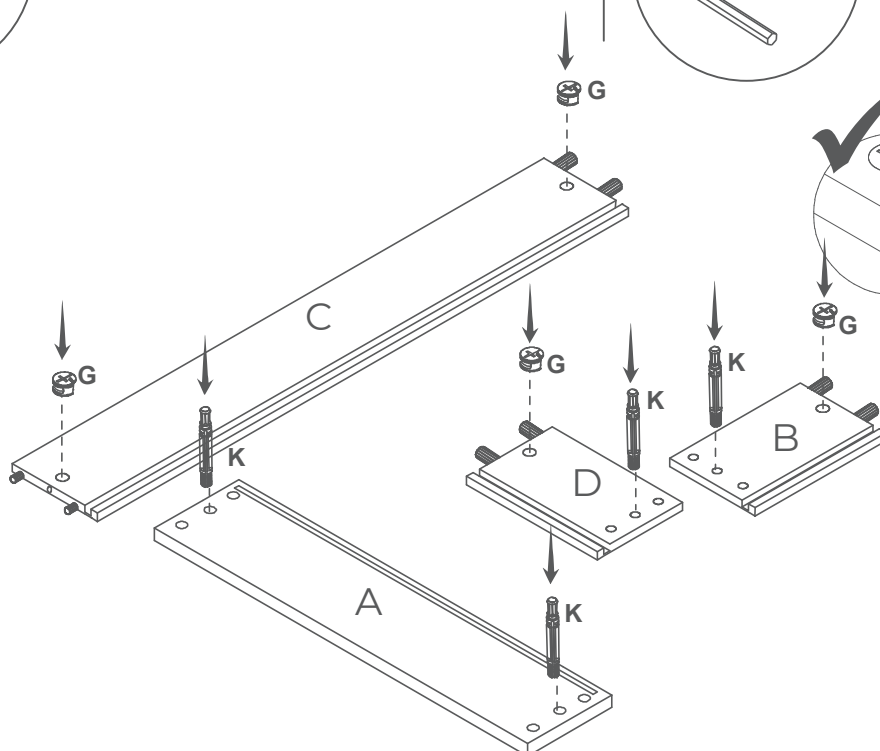




4 ALLEN 4MM

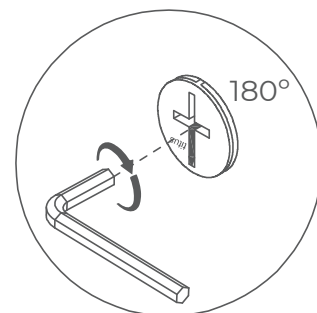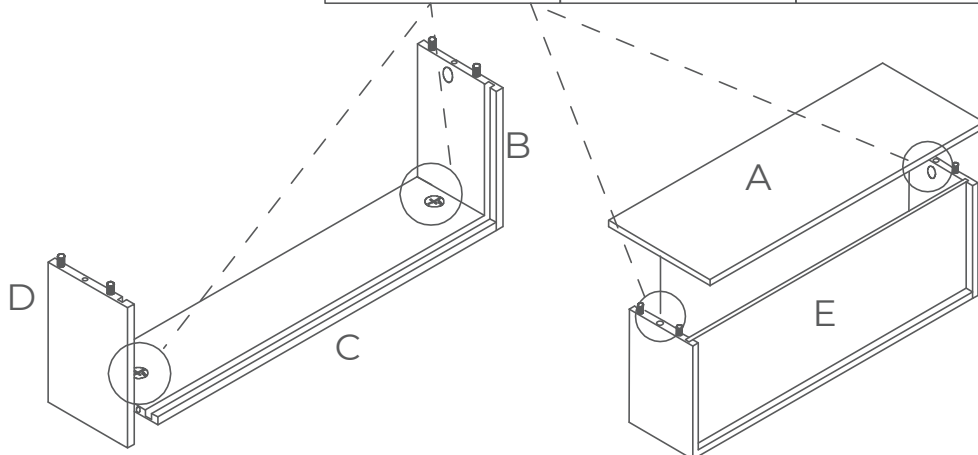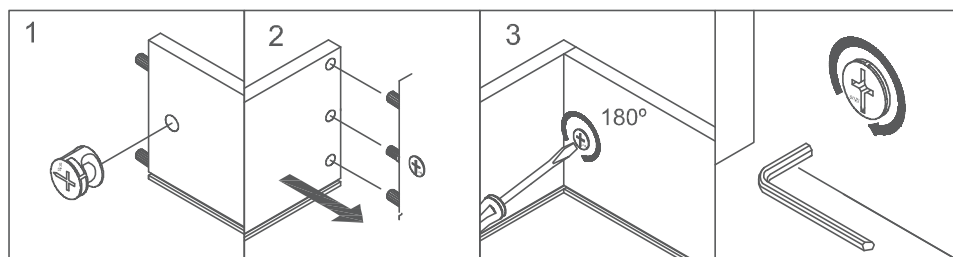

5






C04790
LX2

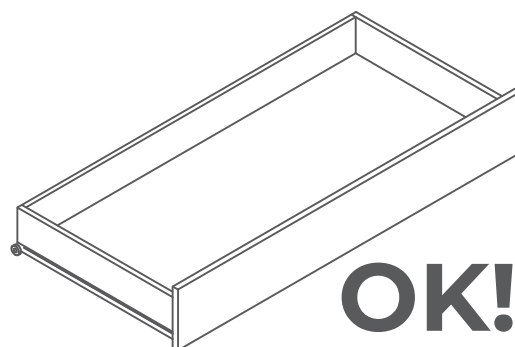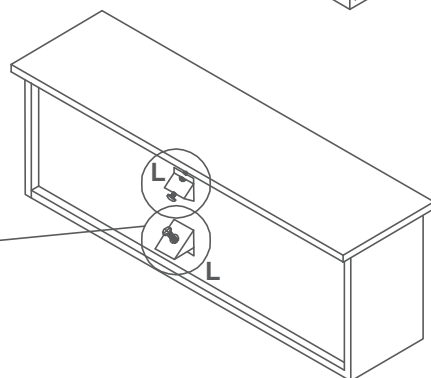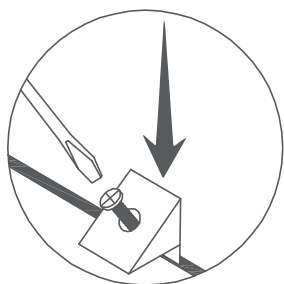


OK!!

SOLO PARA CUNAS QUE UTILICEN SOPORTE DE SOMIER METÁLICO, EN CASO DE QUE SE CAIGA EL BAJÓN
SEGUIR ESTAS INSTRUCCIONES
ONLY FOR CRADLES THAT USE METAL BED SUPPORT, IN CASE THE BASE FALLS FOLLOW THESE
INSTRUCTIONS

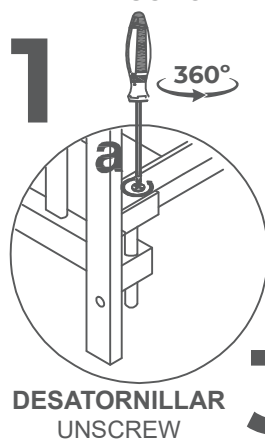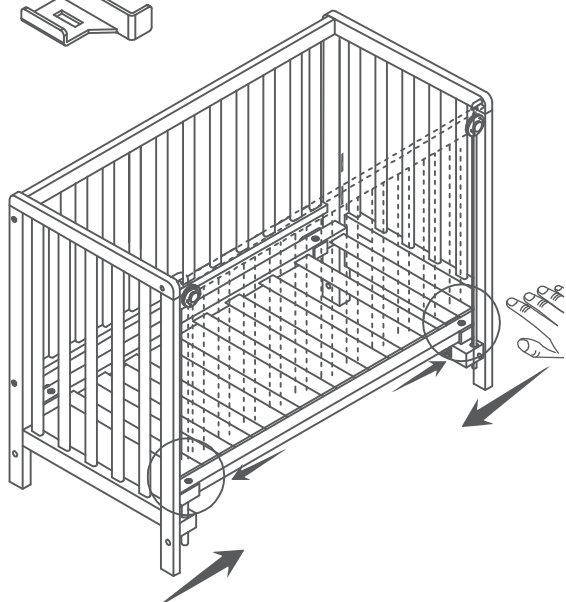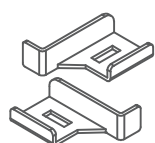


DESATORNILLAR
UNSCREW

3

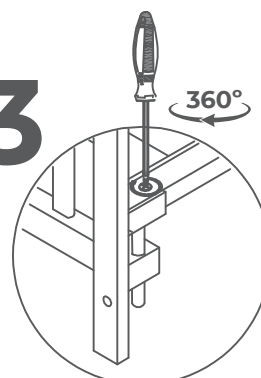

ATORNILLAR
SCREW

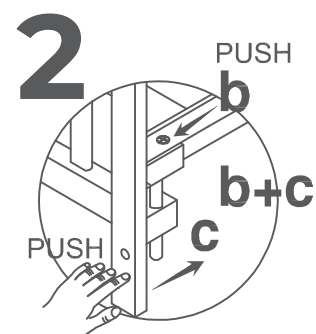

MANTENER EL
CABEZAL Y SOMIER
JUNTOS SIN
SOLTARLOS MIENTRAS
REALIZA EL PASO 3
KEEP THE HEADBOARD
AND SLATTED BASE
TOGETHER WITHOUT
LOOPING THEM WHILE
PERFORMING STEP 3