

Instrucciones de montaje · Assembly Instructions

A-1967 MARTHA

ES • IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

EN • IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR • ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.


IT • IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.


PT • IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

R • ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТАЙТЕ.


A • — لامعتسالا لبق اديج أرقا. ةعجارملل ظفح ا. ماه

CN • 重要事项：保留以备将来参考，请仔细阅读。

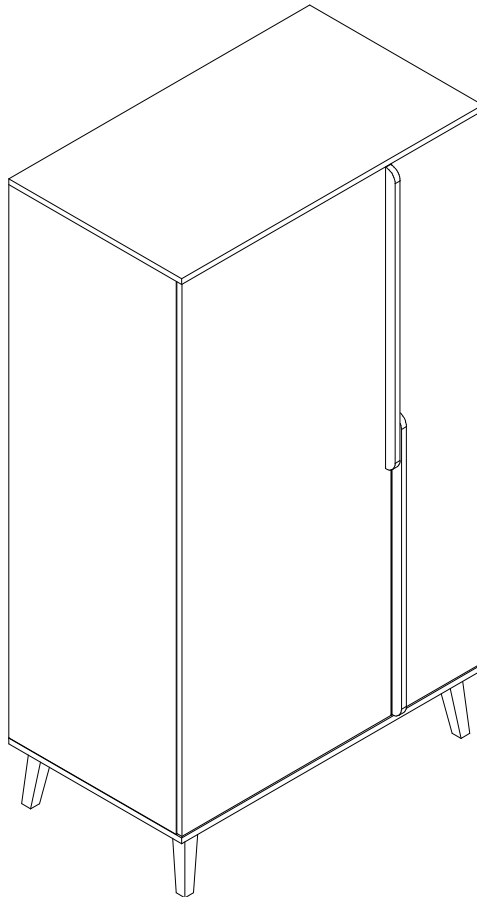


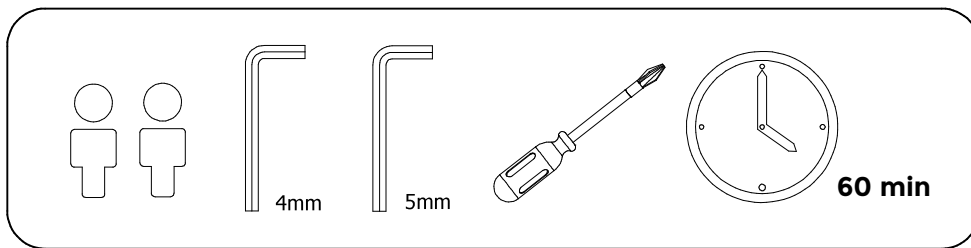

C07914
x1 (4mm)



C07506
x1 (5mm)




C01538
x12




C01537
x12




C14243
x2

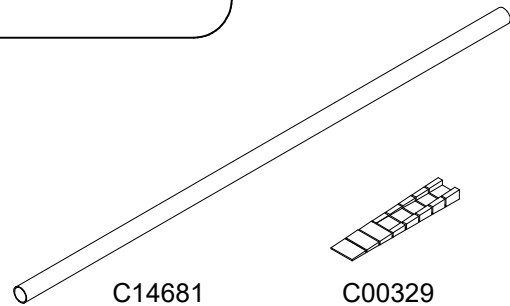

C14681
x1



C00329
x1



C01419
x16 (7.8x25)



C01247
x4 (6x25)



C03122
x6 (3.5x30)



C00325
x4



C11286
x4



C01528
x4




C04790
x8



C01536
x24



C01759
x24



C10631
x2




C10987
x4




C01113
x4 (3.5x15)




C0326
x1



C10392
x1

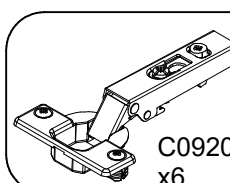



C09207
x6




C09208
x6

5025548

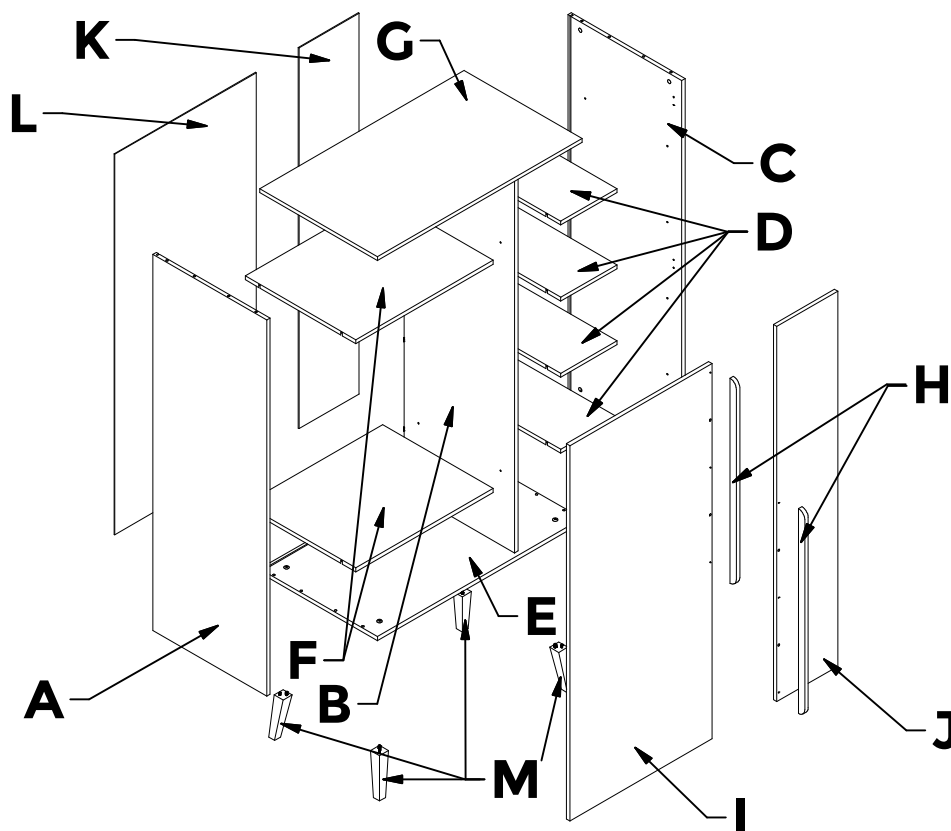

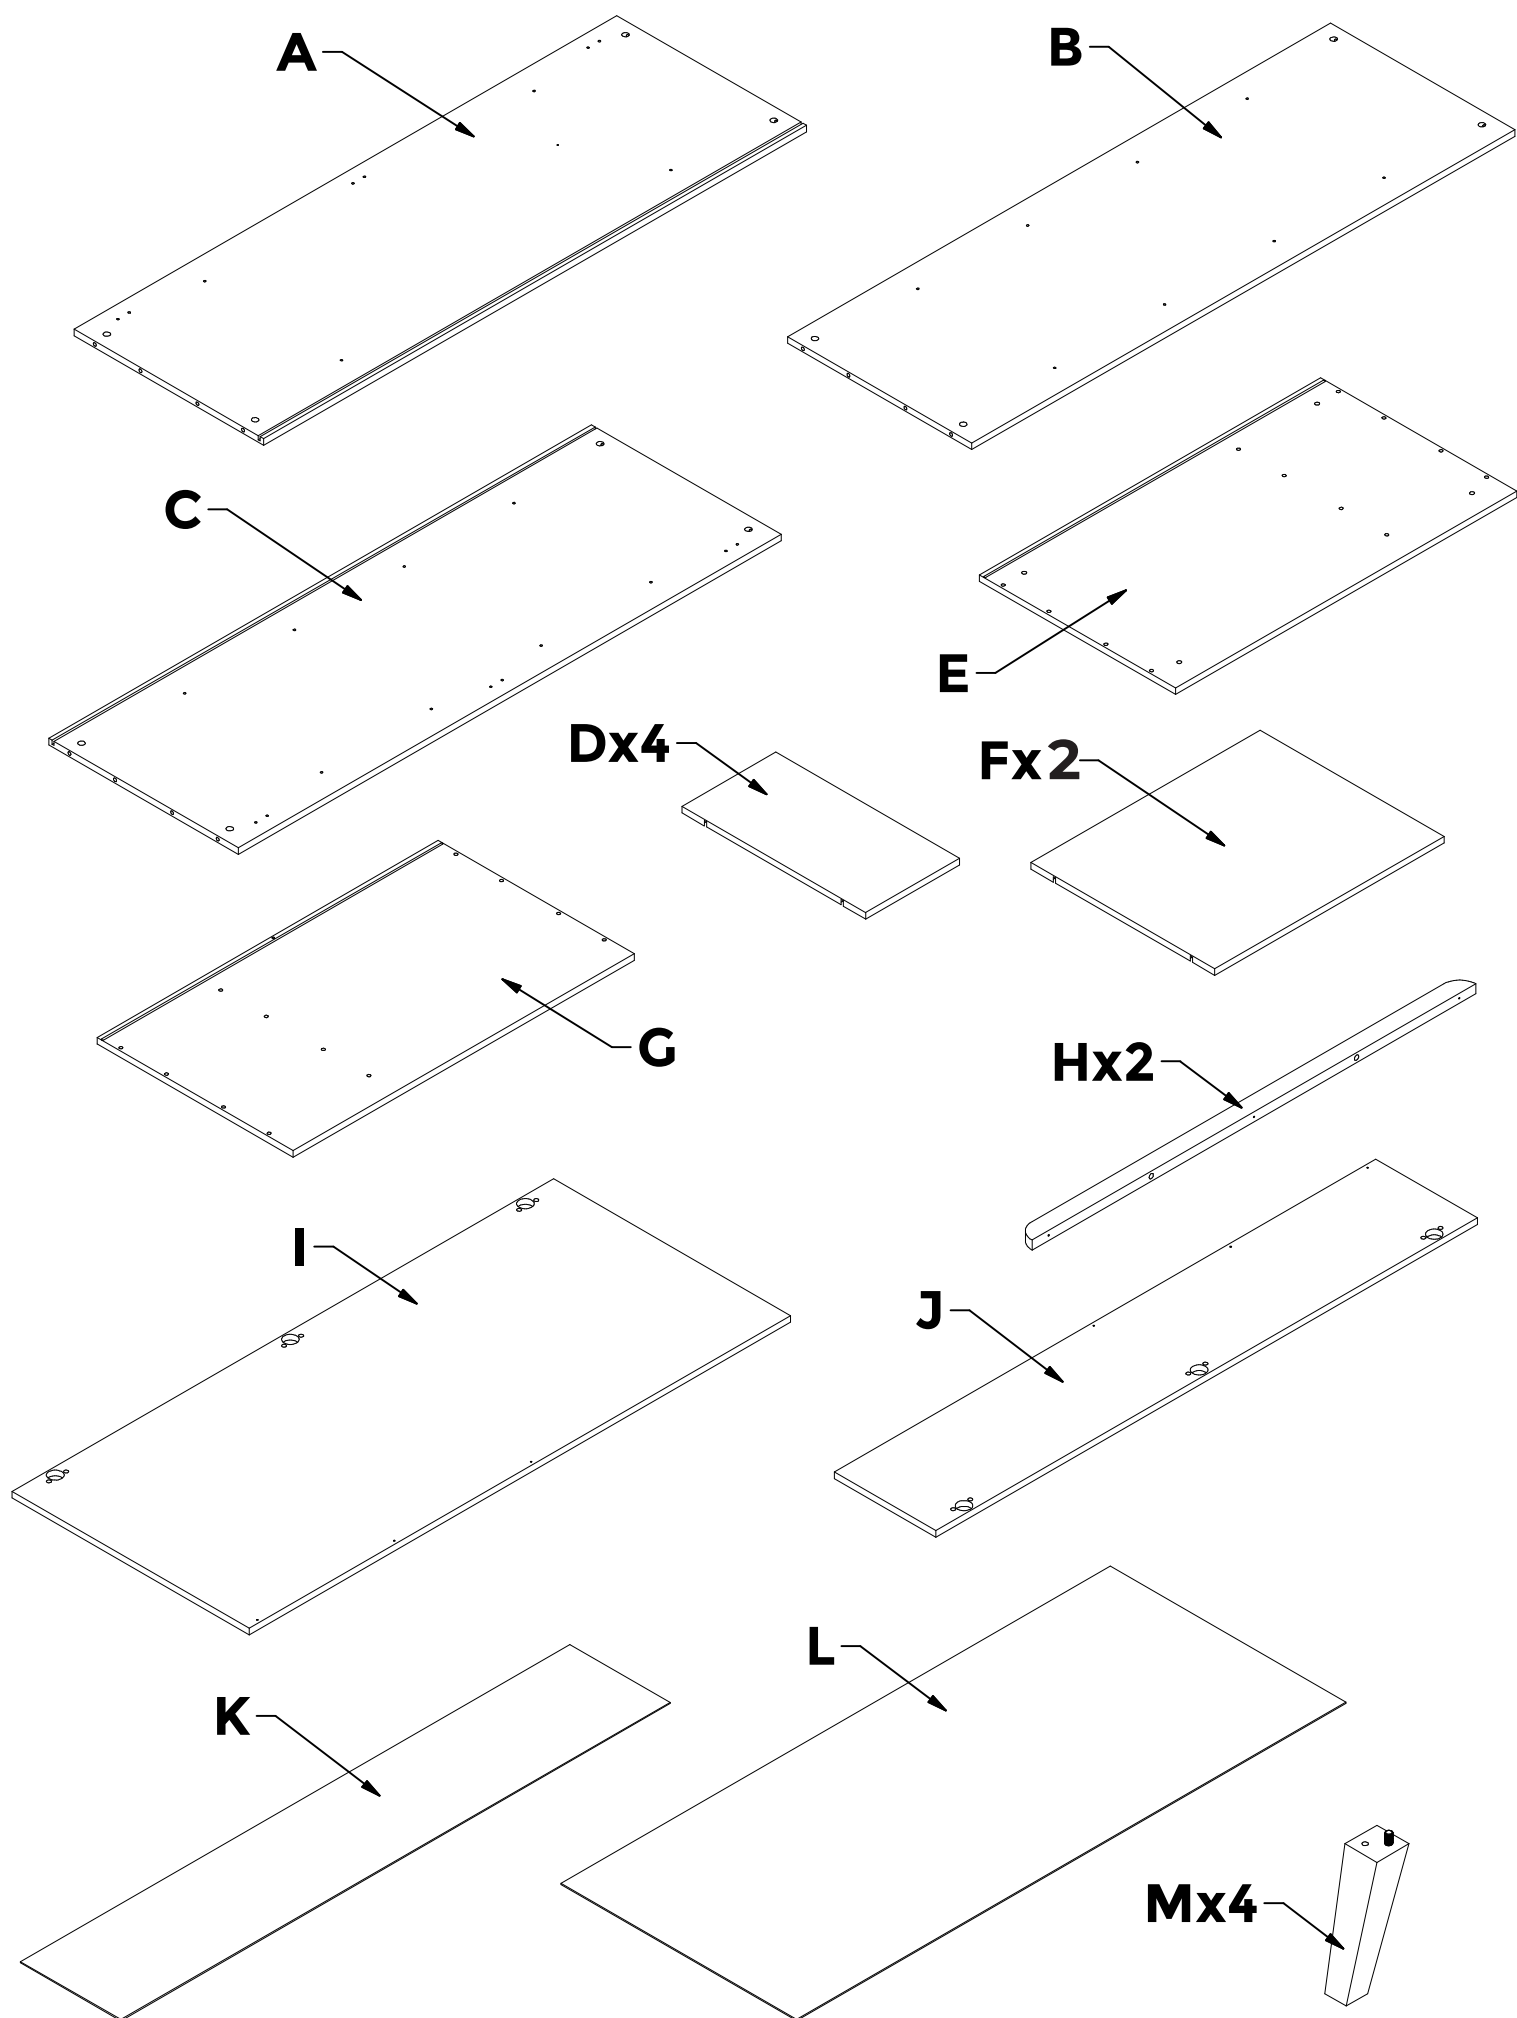

1



C14243
x1




C01113
x1 (3.5x15)



C01537
x4




C01536
x4




C01538
x4








C01419
x4 (7.8x25)

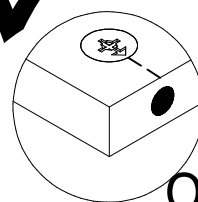

OK

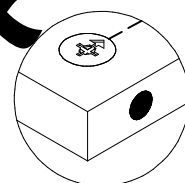

NOK

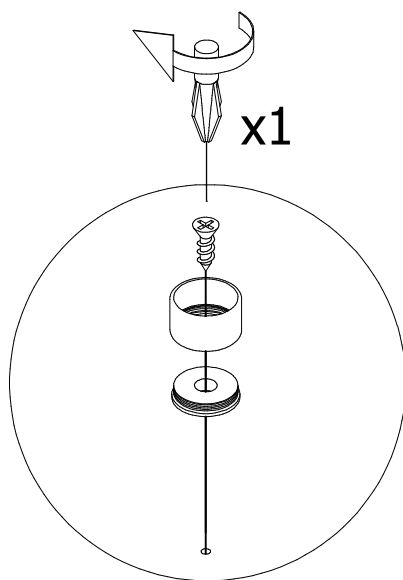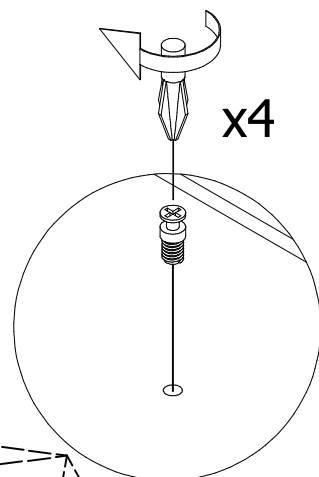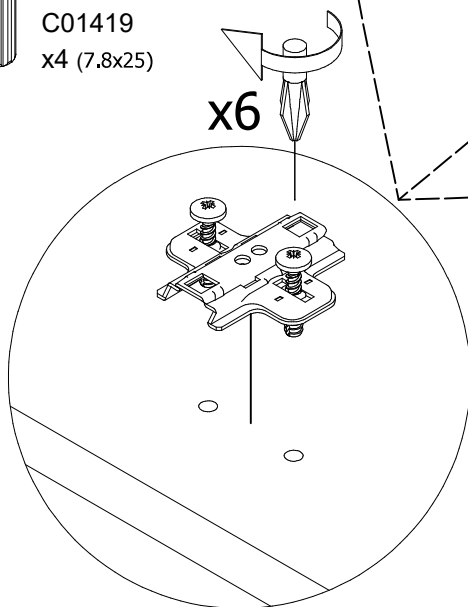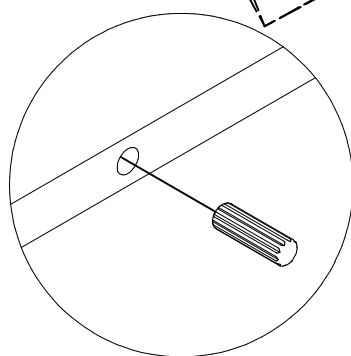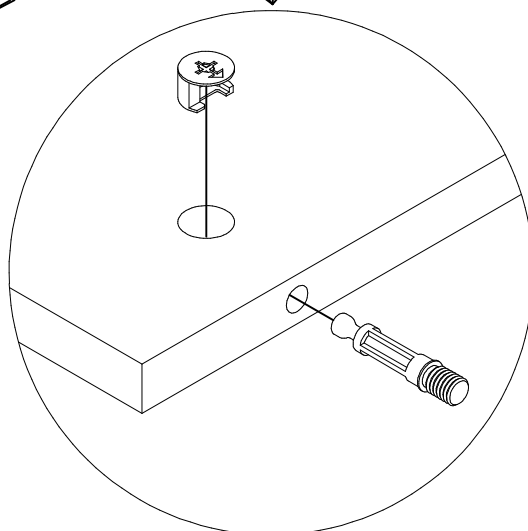

2



C01537
x4



C01536
x8




C01538
x4




C01419
x4 (7.8x25)


x8

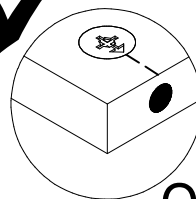

OK

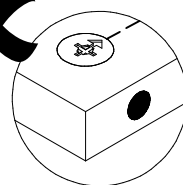

NOK

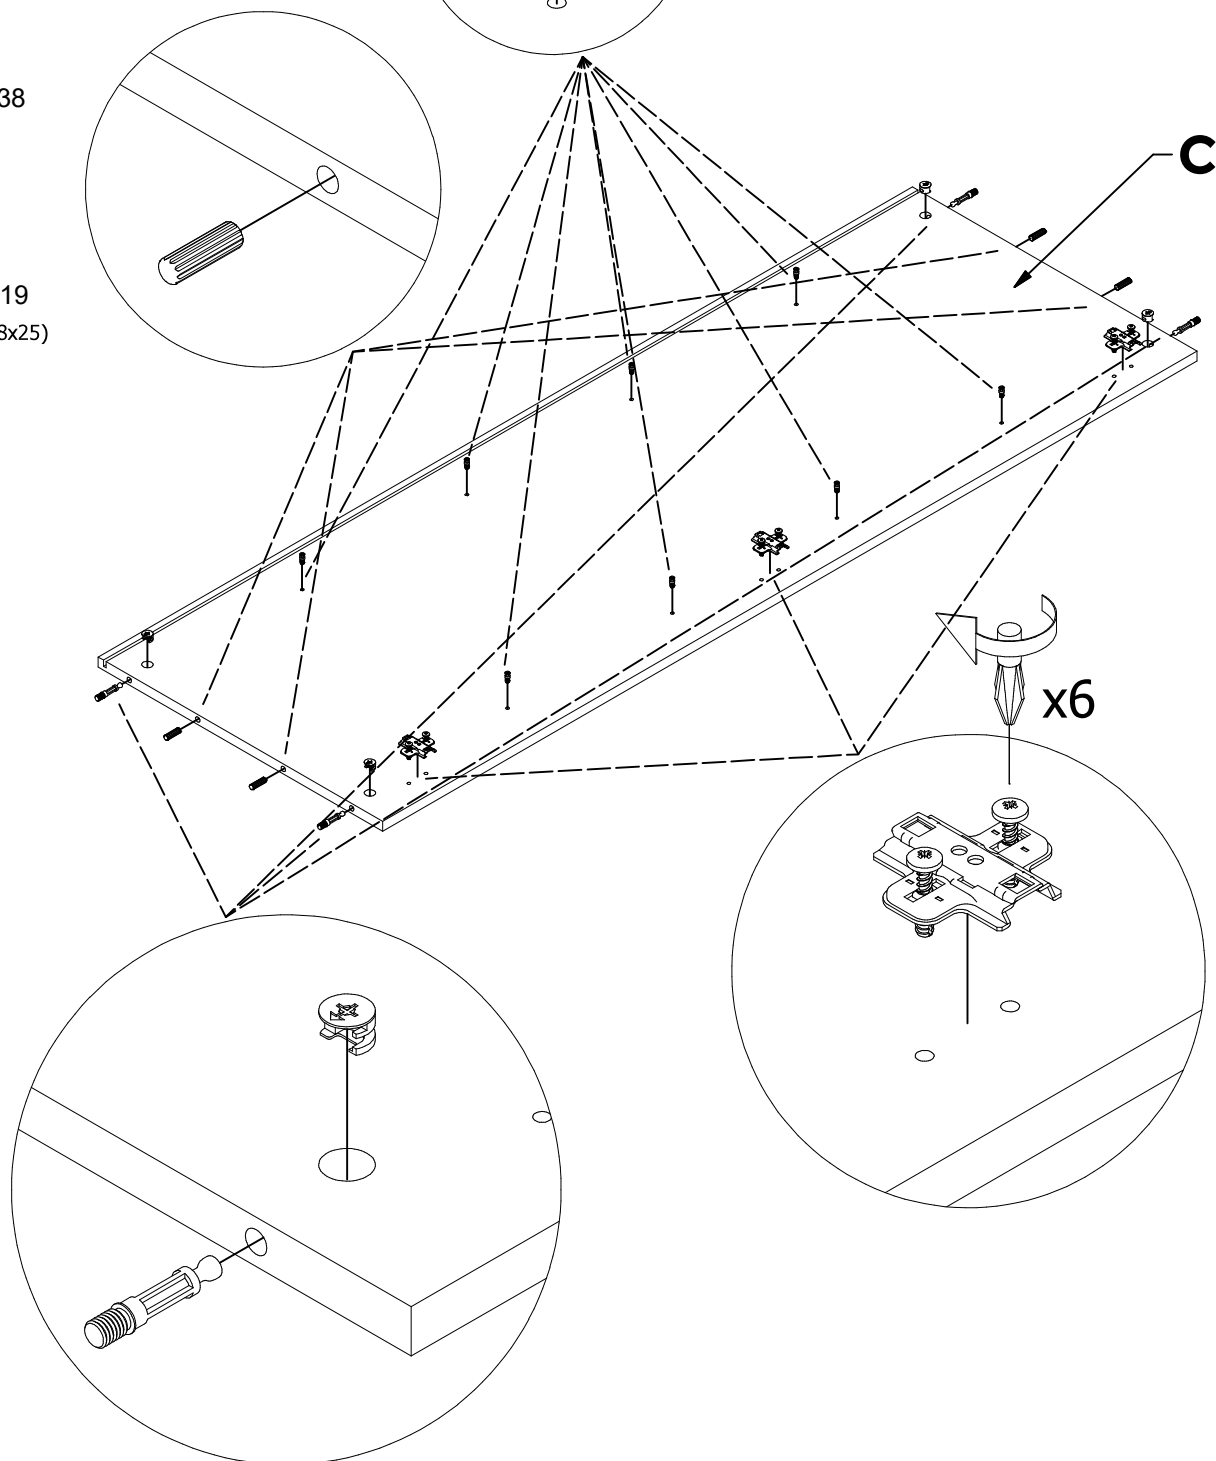

C

x6

3



C01113
x1 (3.5x15)

C01537
x4

C01536
x12

C01538
x4

C01419
x4 (7.8x25)

C14243
x1

x1

x4


x8

B

OK

NOK

4




C01247
x4 (6x25)



C11286
x4



C10987
x4


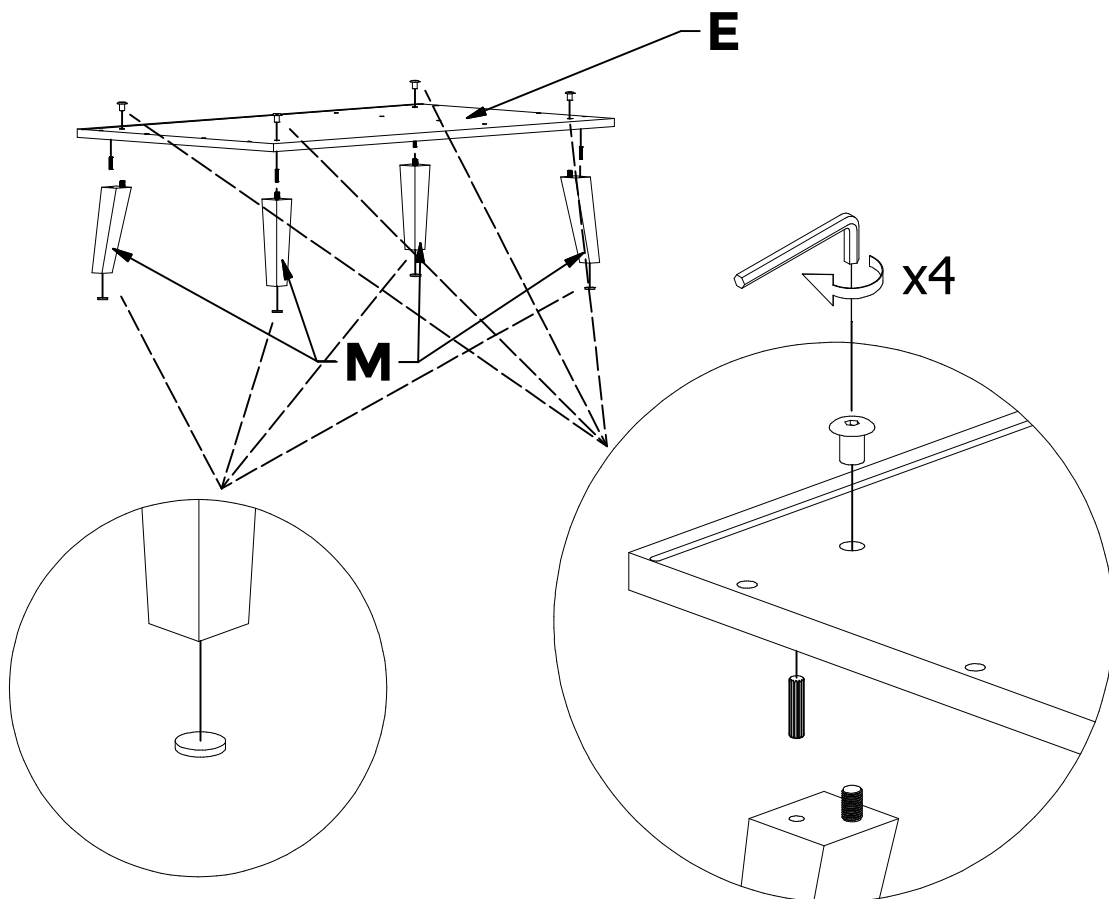


5



C01759
x16

Dx4

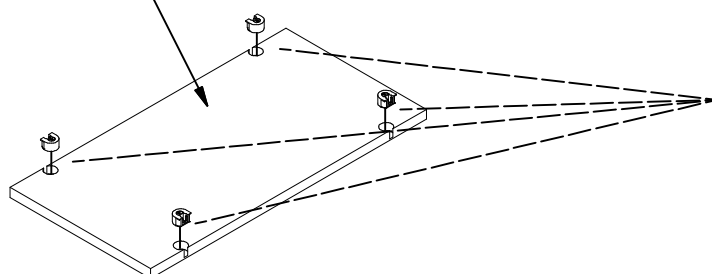
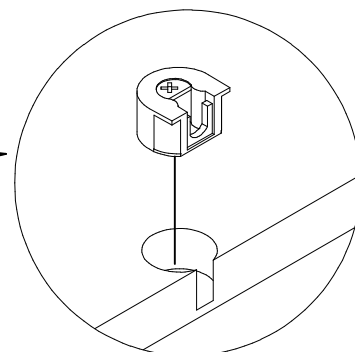


6



C01759
x8

Fx2

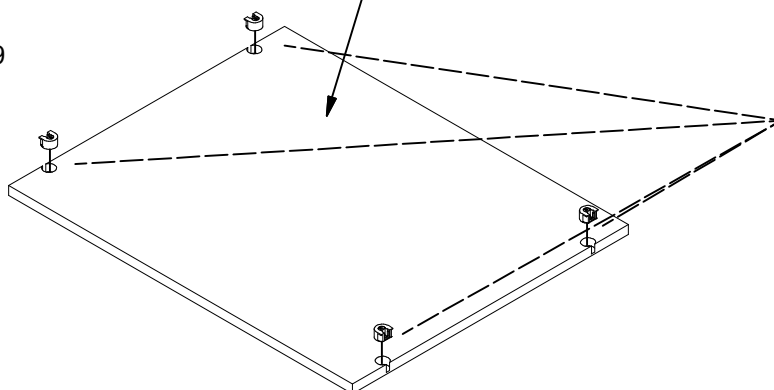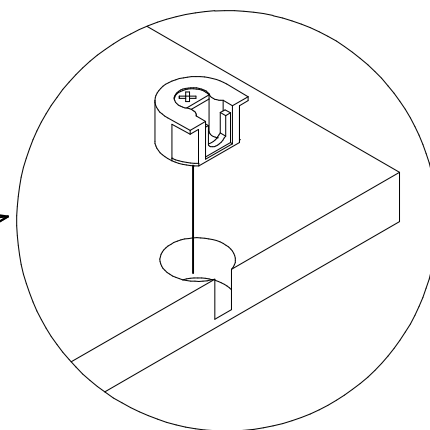

7



C01113
x1 (3.5x15)






C01419
x2 (7.8x25)

C09207
x3

C09208
x3

C03122
x3 (3.5x30)


C10631
x1

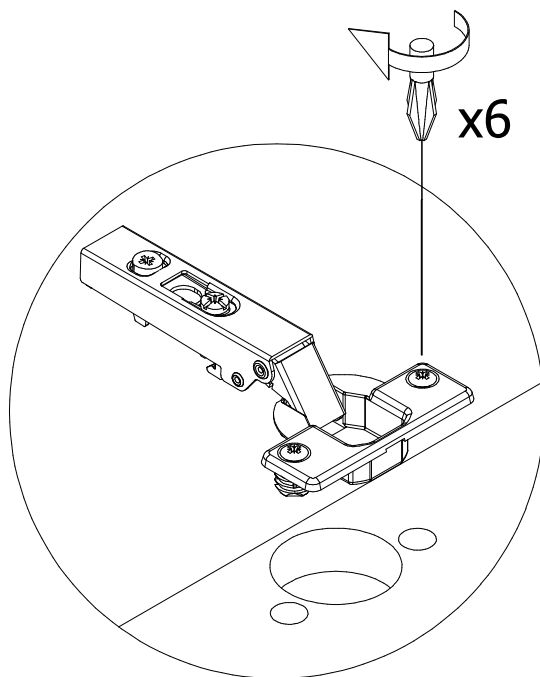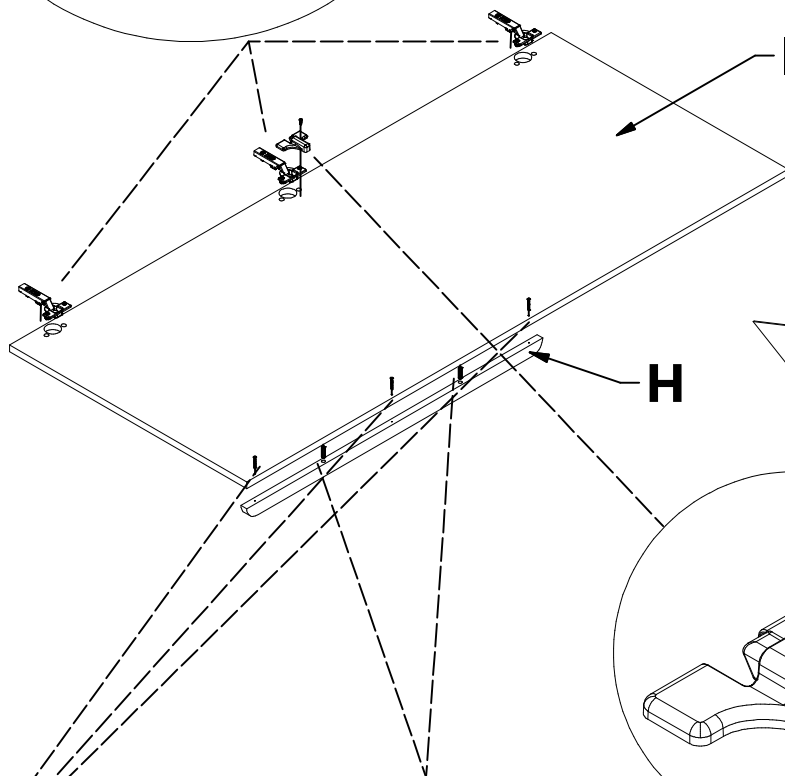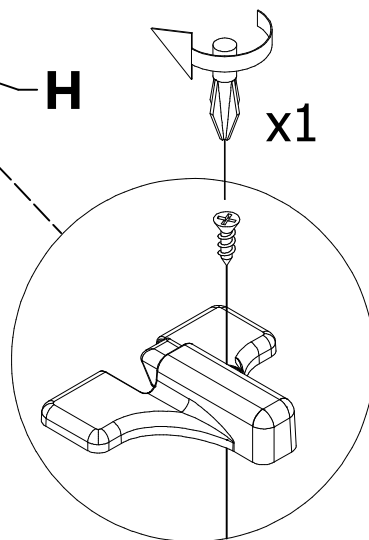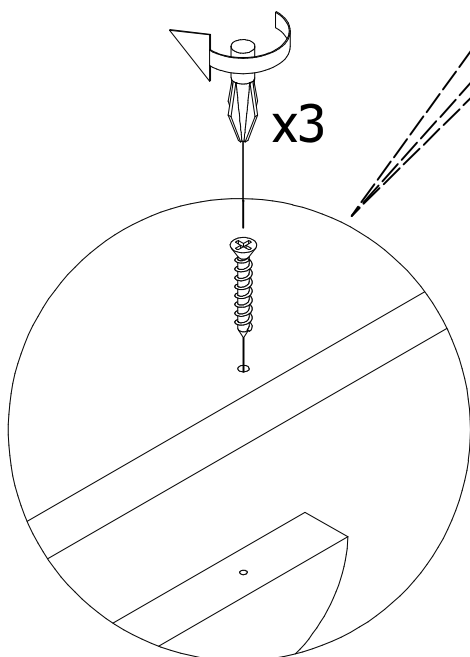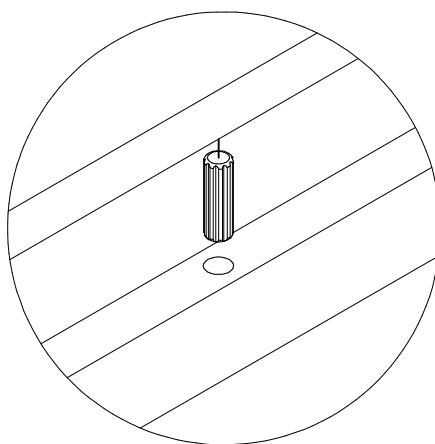


8




C01113
x1 (3.5x15)



C01419
x2 (7.8x25)

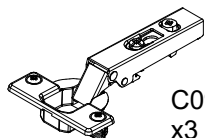


C09207
x3




C09208
x3




C03122
x3 (3.5x30)




C10631
x1

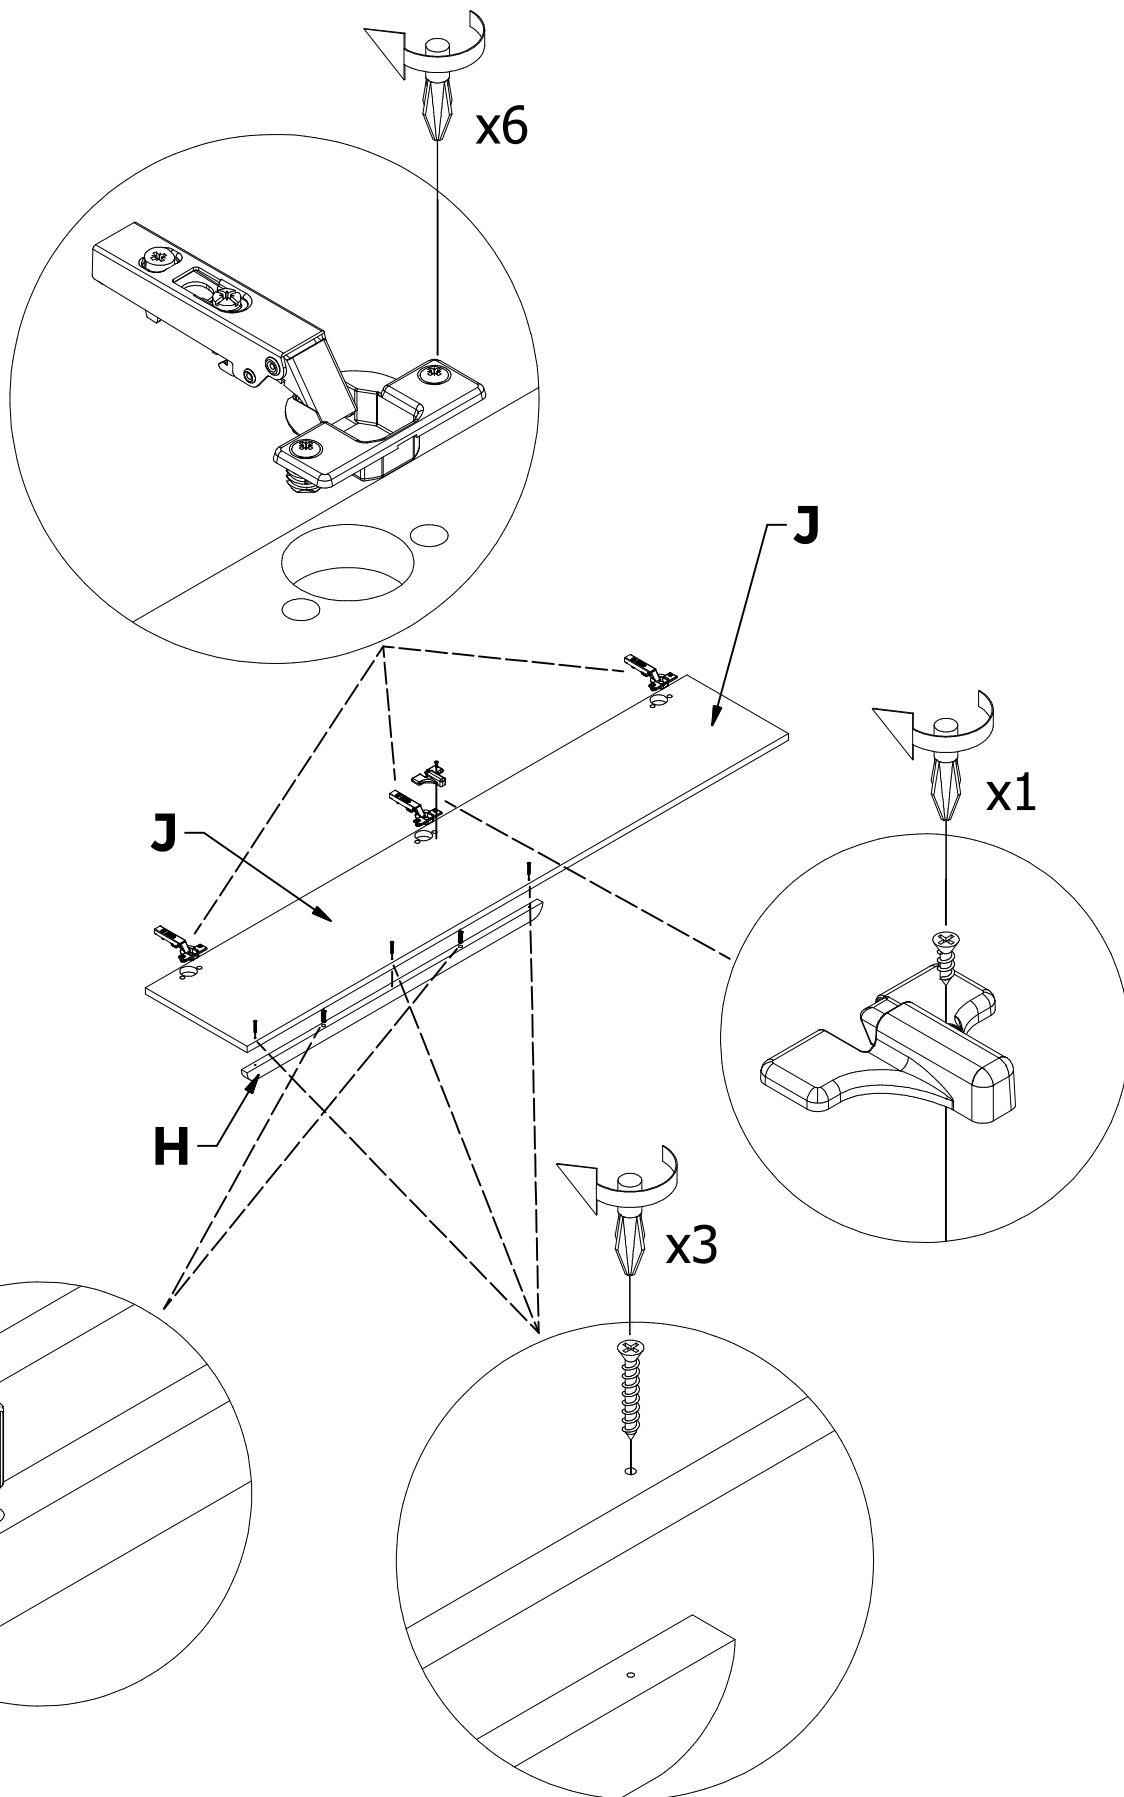


9

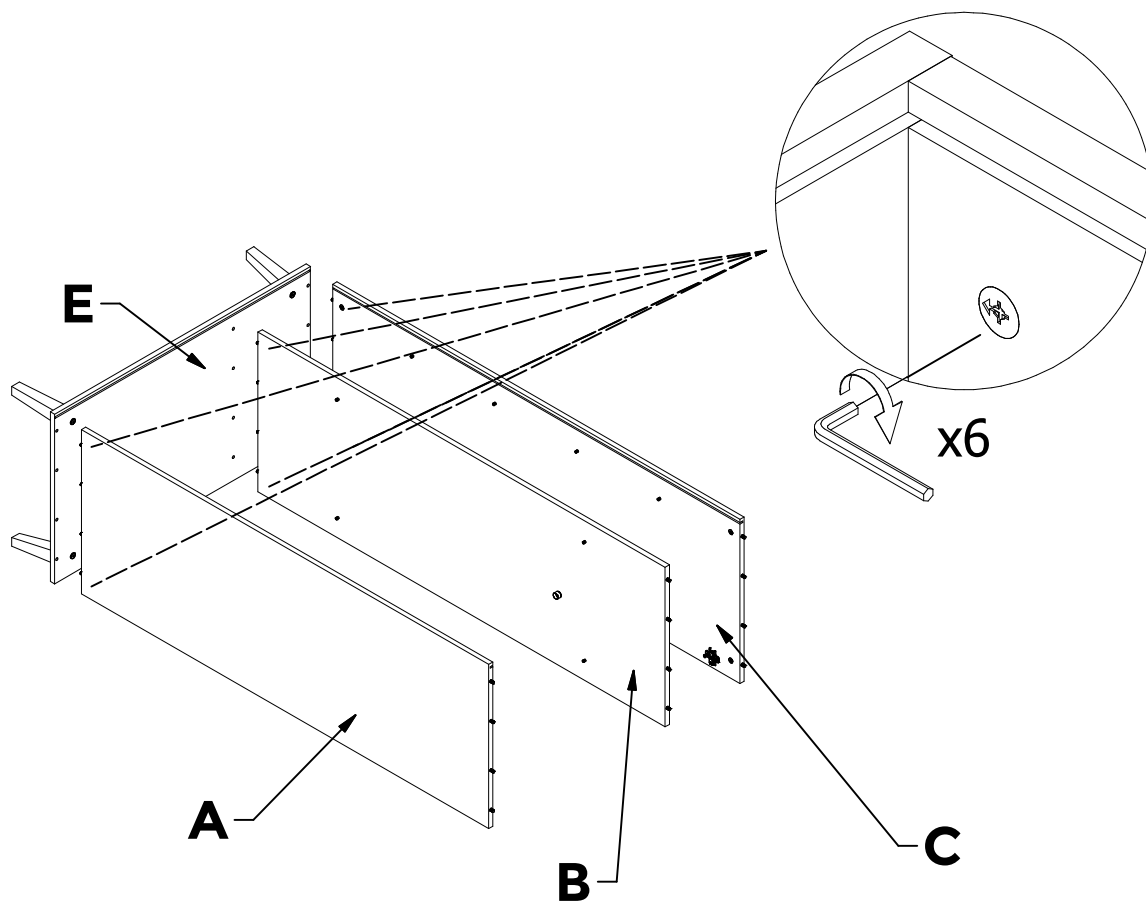


10

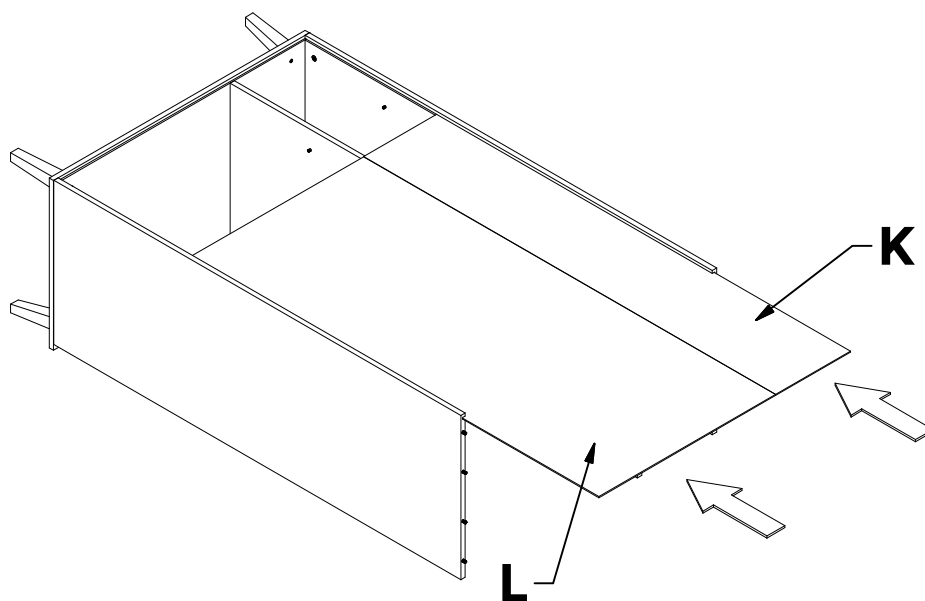

11

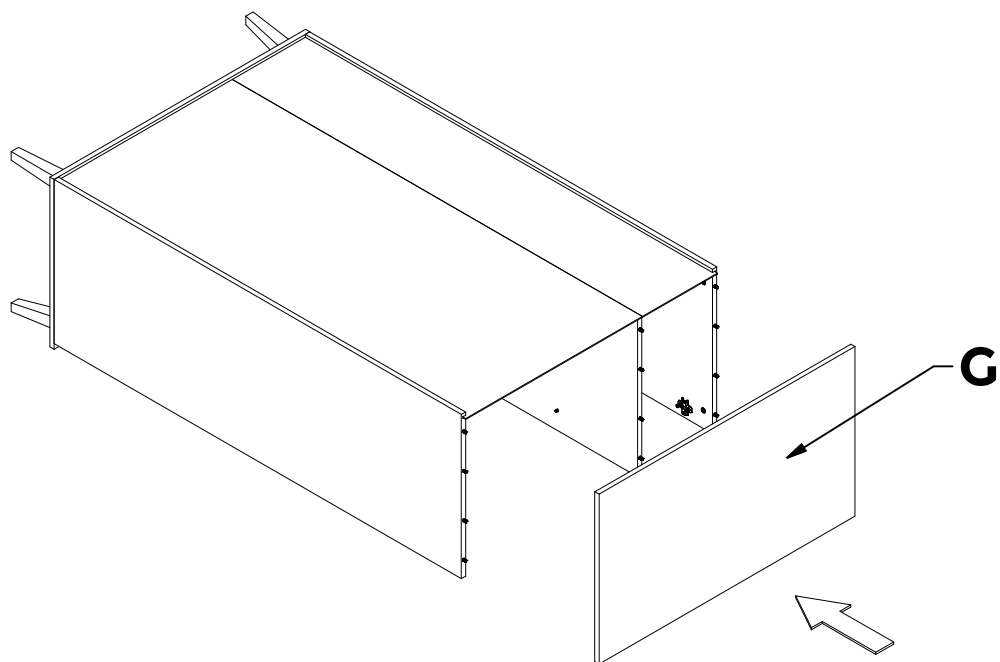

12

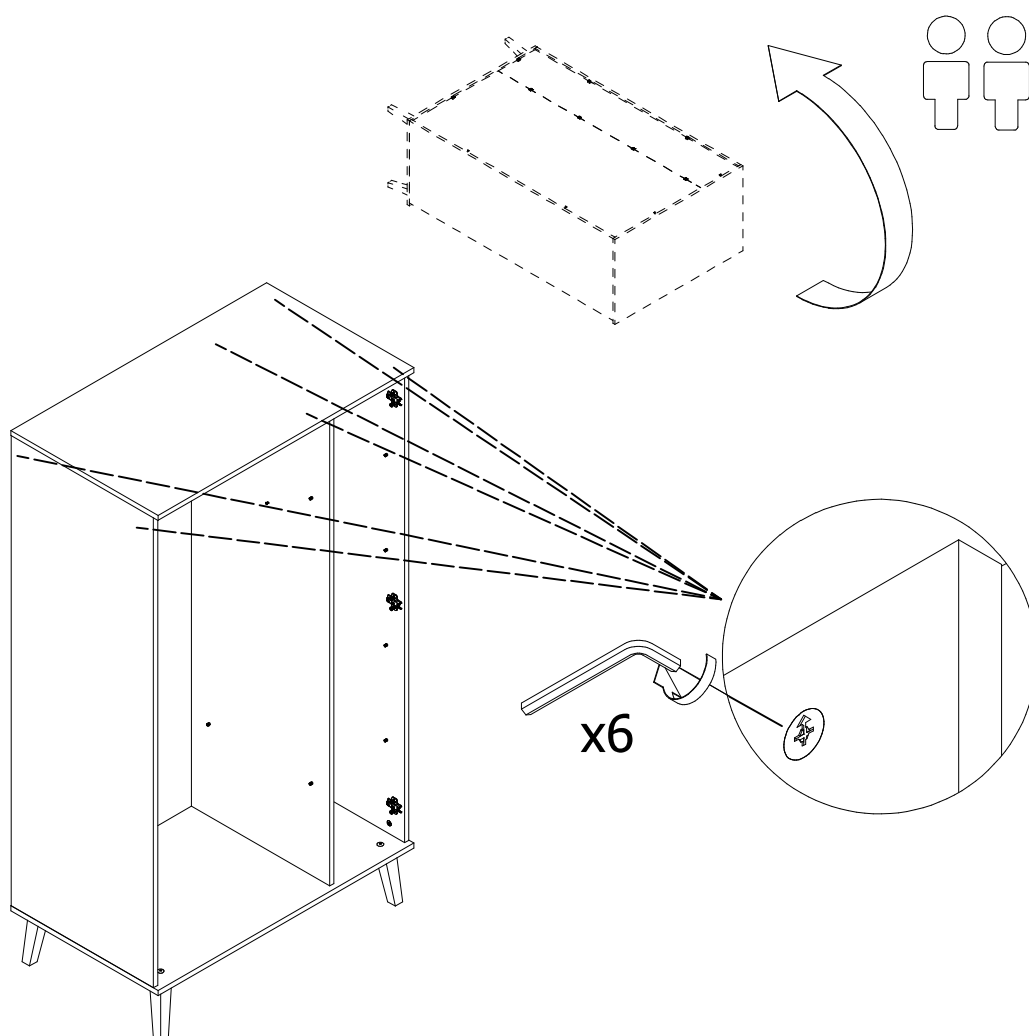

13




C04790
x8





C00325
x4









C01528
x4

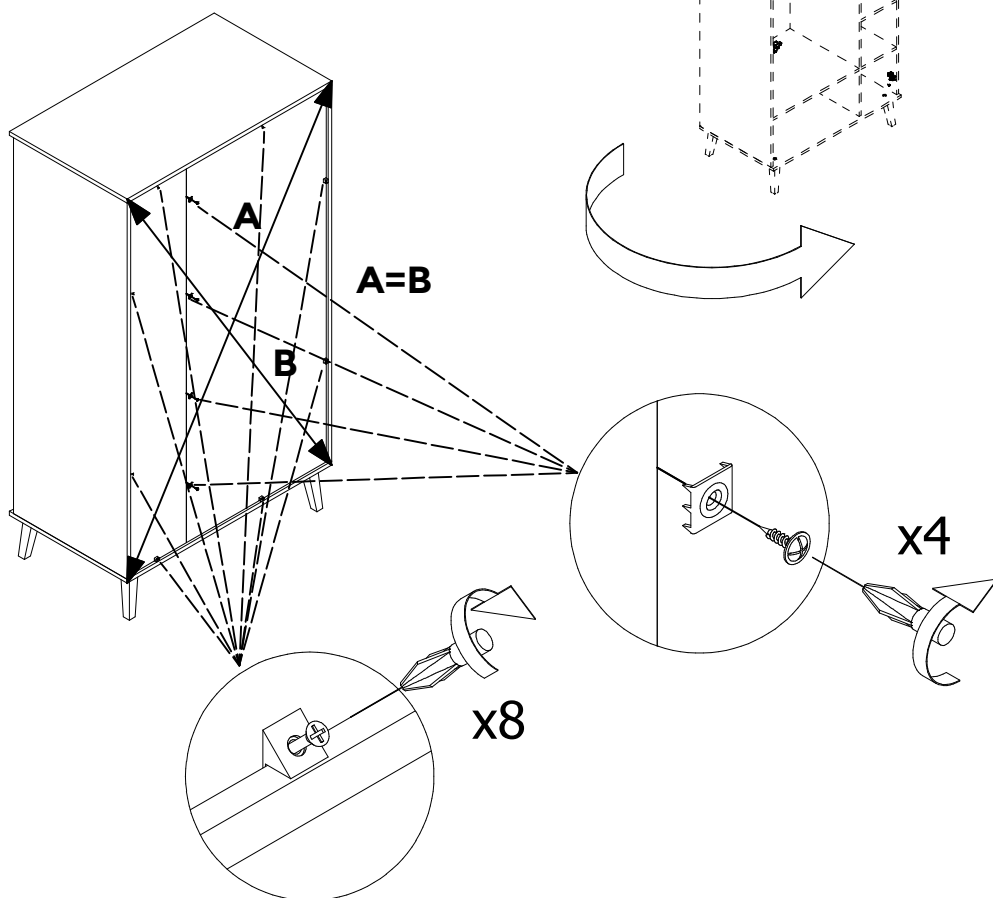



14

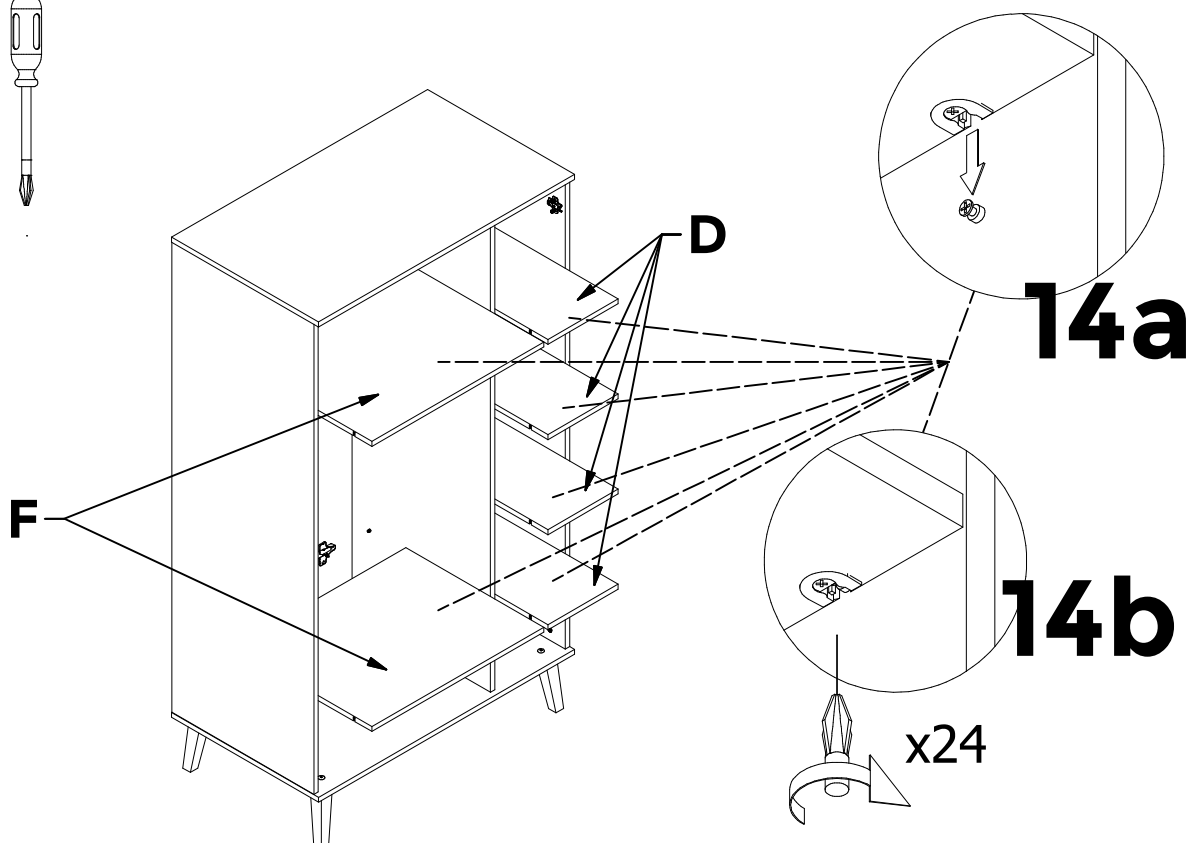


15

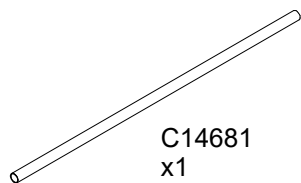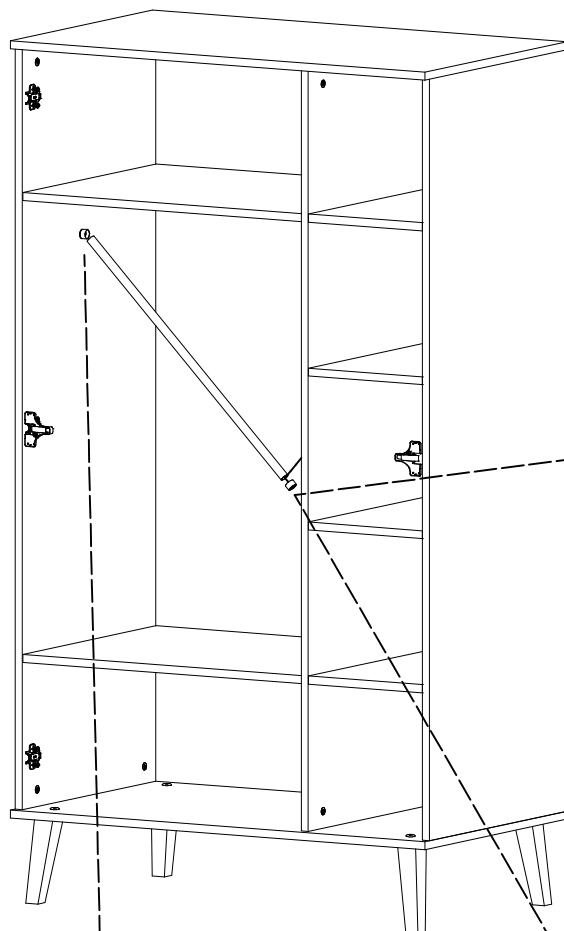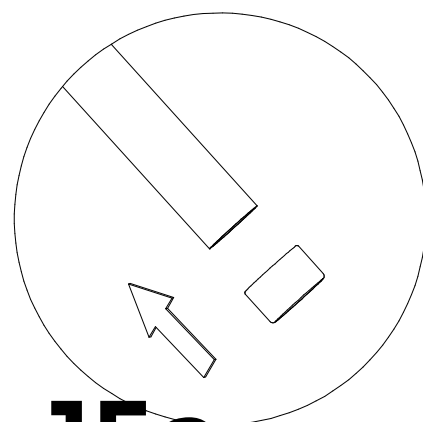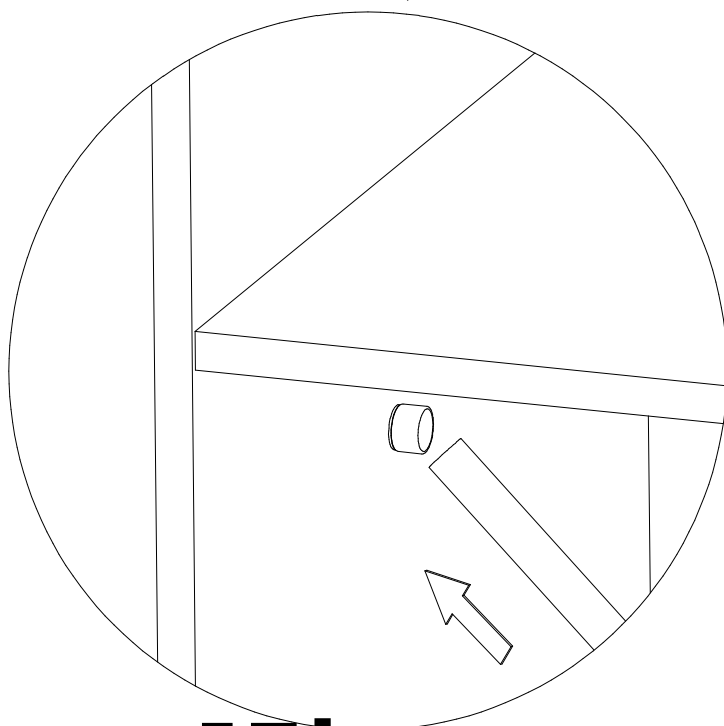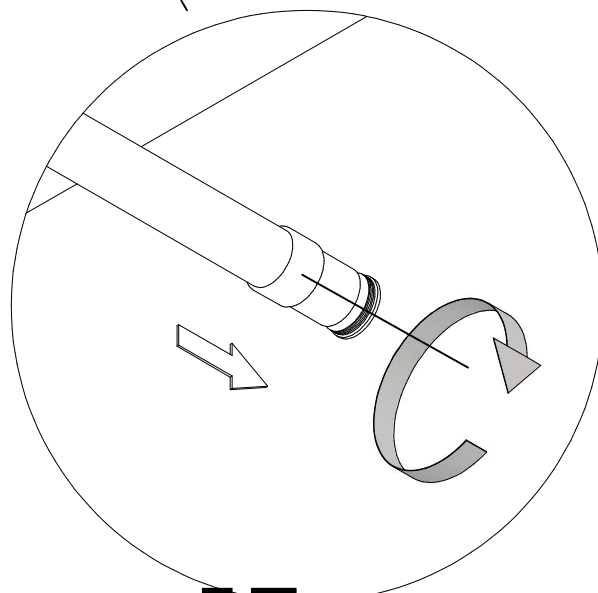


16

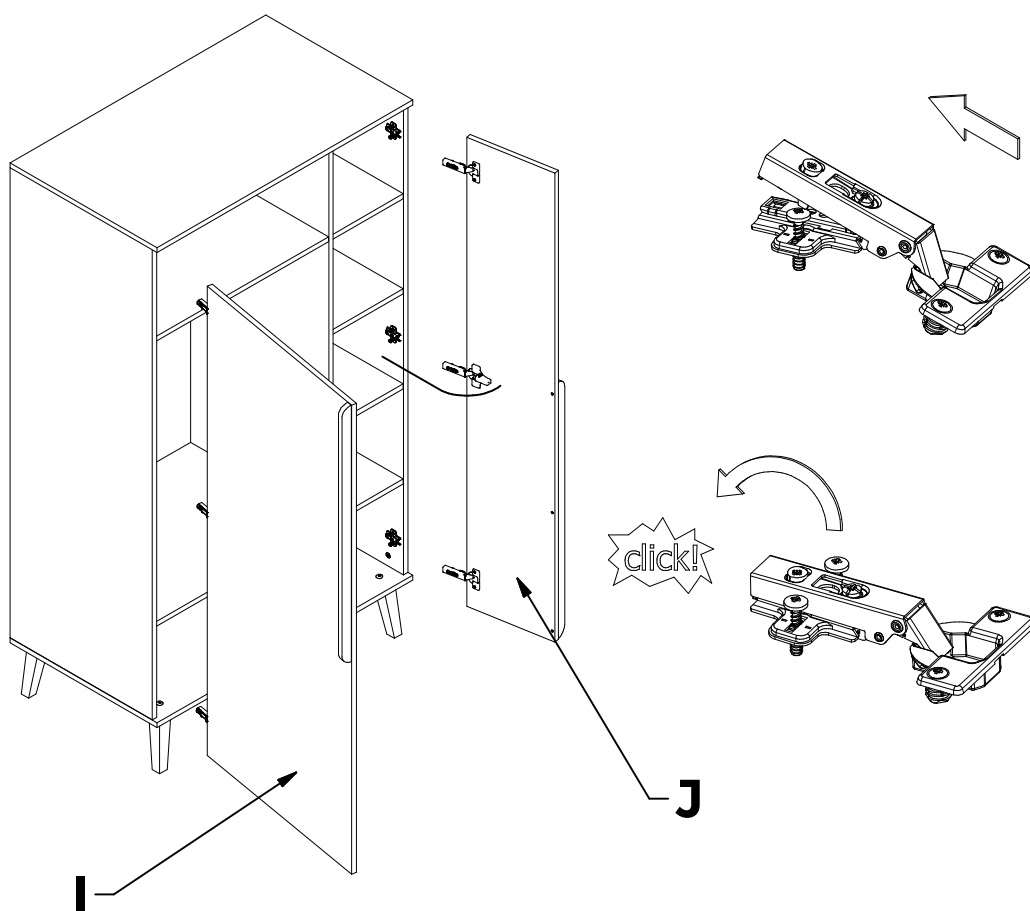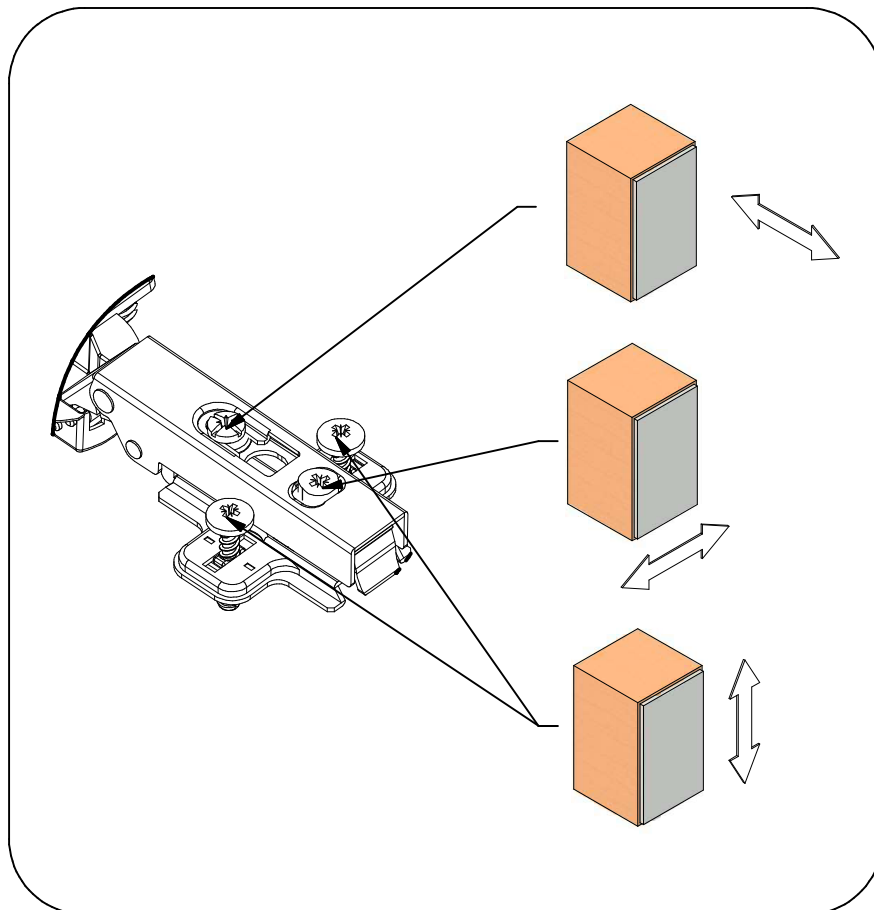



17





C0326
x1




C10392
x1

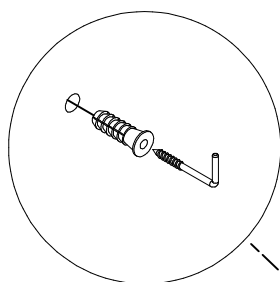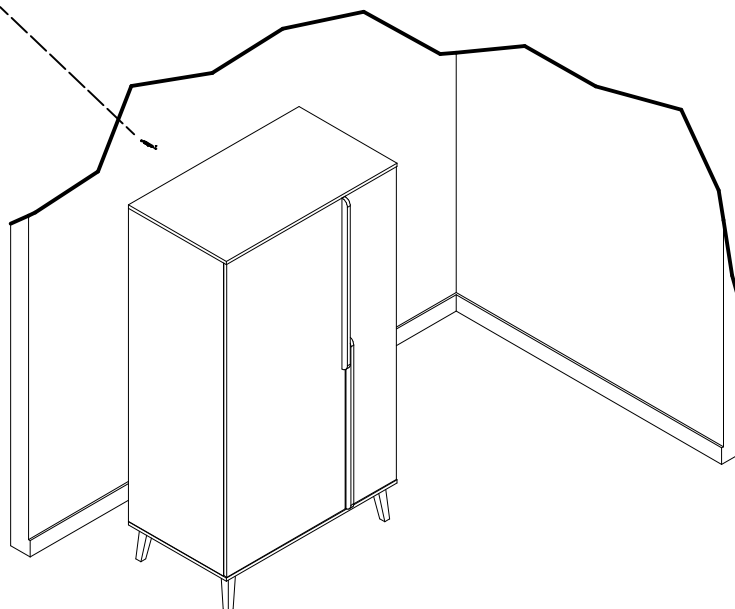






18

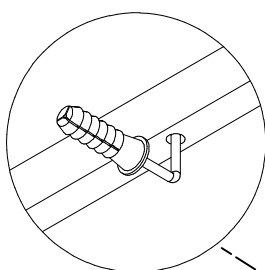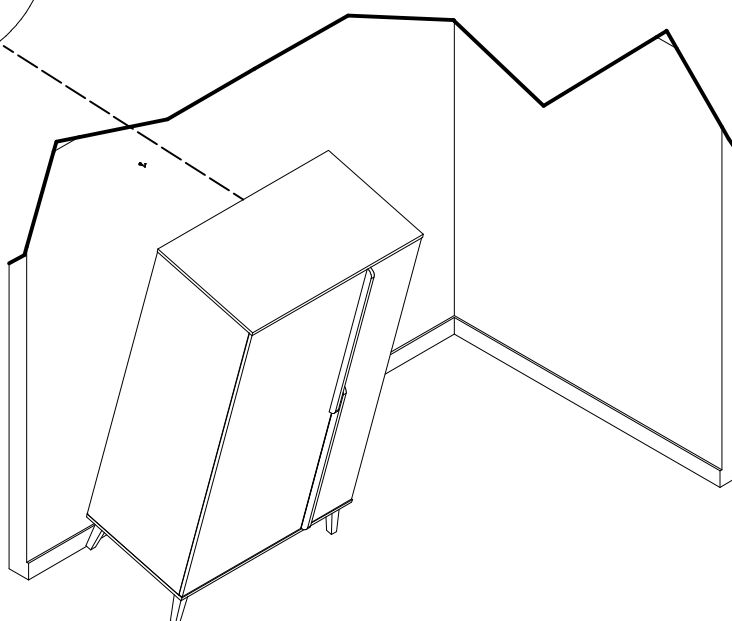

19



C00329
x1

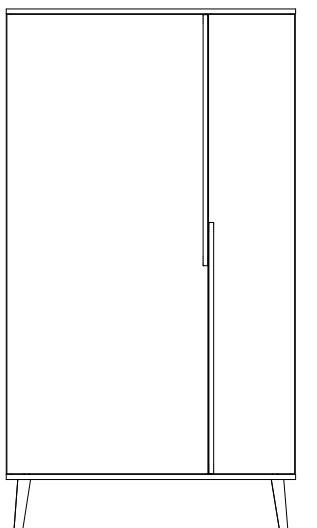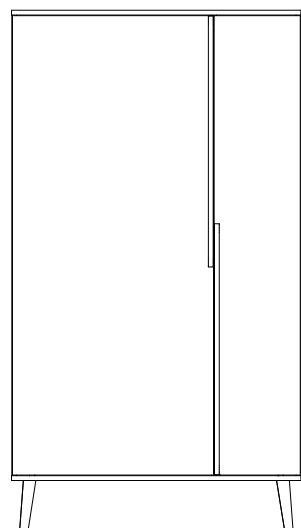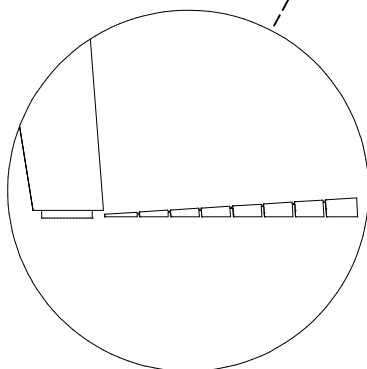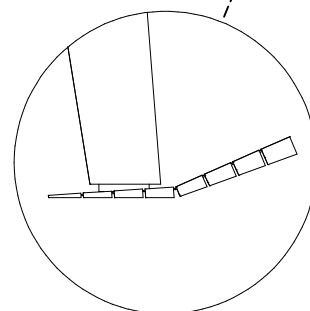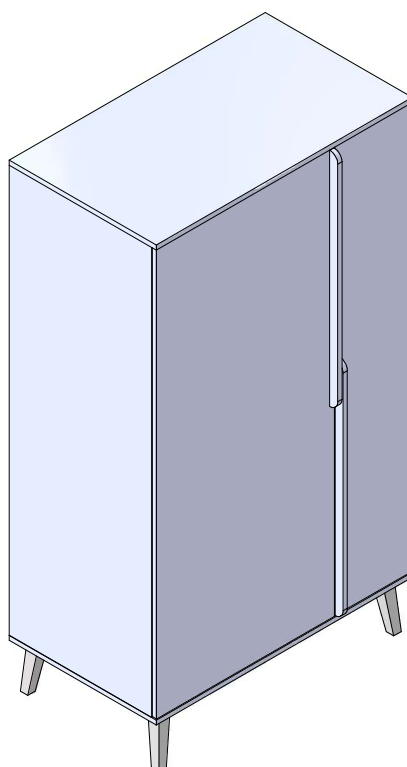

OK