

Instrucciones de montaje · Assembly Instructions

Cómoda Trevi

5032906

ES • IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

EN • IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR • ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT • IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.


PT • IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

R • ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТАЙТЕ.


A • الاممعت سالا لببق مادي ج أرقا. ععجارم لل ظفح ا. ماه

CN • 重要事项：保留以备将来参考，请仔细阅读。



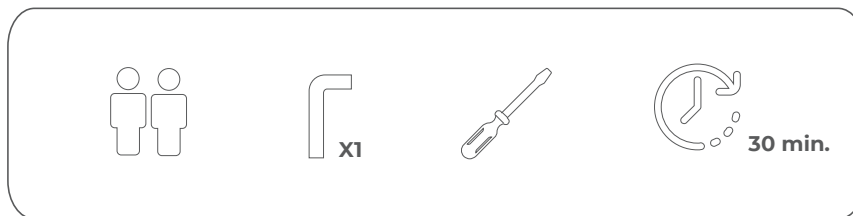

C07914 x1
ALLEN 4MM




C05503 x8
(M6x40)



C05366 x8



C11092 x1



C10392 x1




C00326 x1



C01419 x12



C01537 x20




C01538 x20




C01235 x12
(Euro)



C14464 x2




C00329 x1



C11360 x4




C00192 x4
(M4x25)



L


C09061 x2




R




C04790 x10

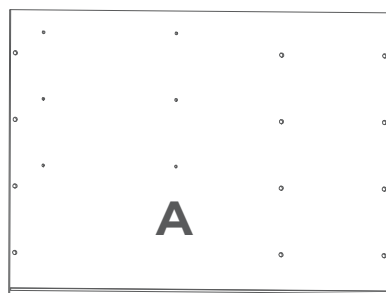


A

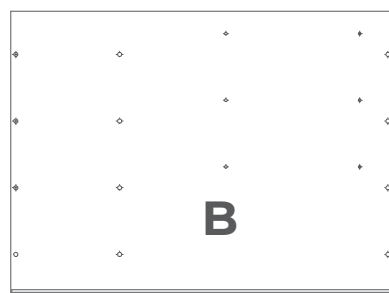


B

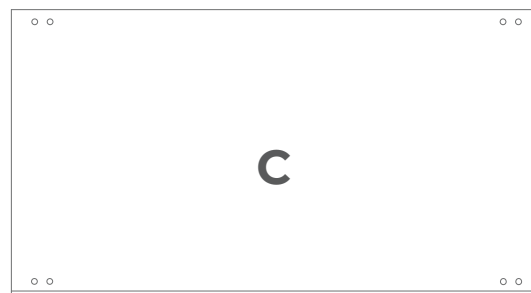

C

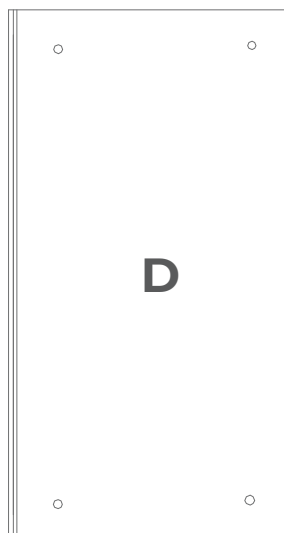

D

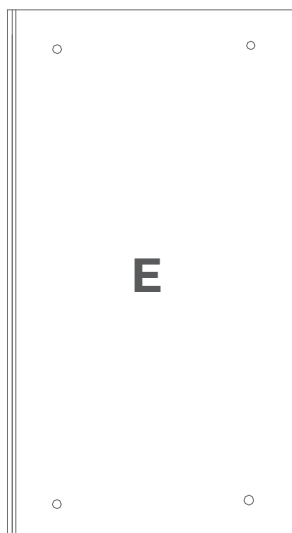

E



F



G




Ix2



Hx2


1



C05503 x8
(M6X40)




C05366 x8

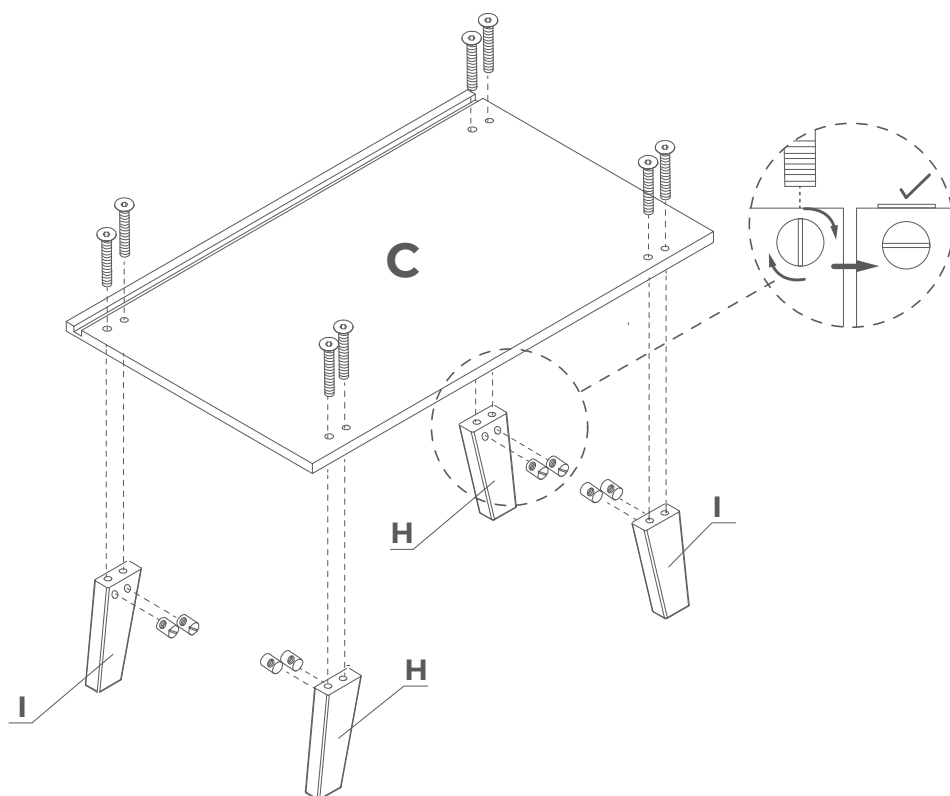


2



C011419 x6




C01538 x6

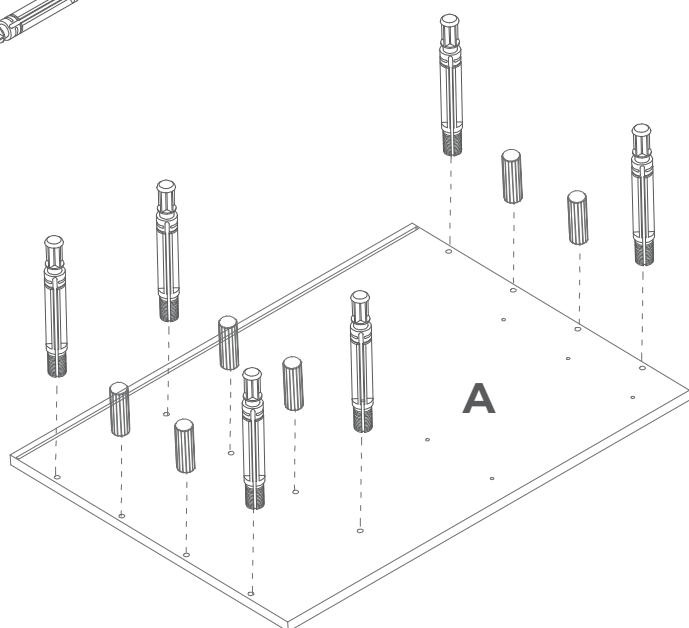


3





C011419 x6





C01538 x6

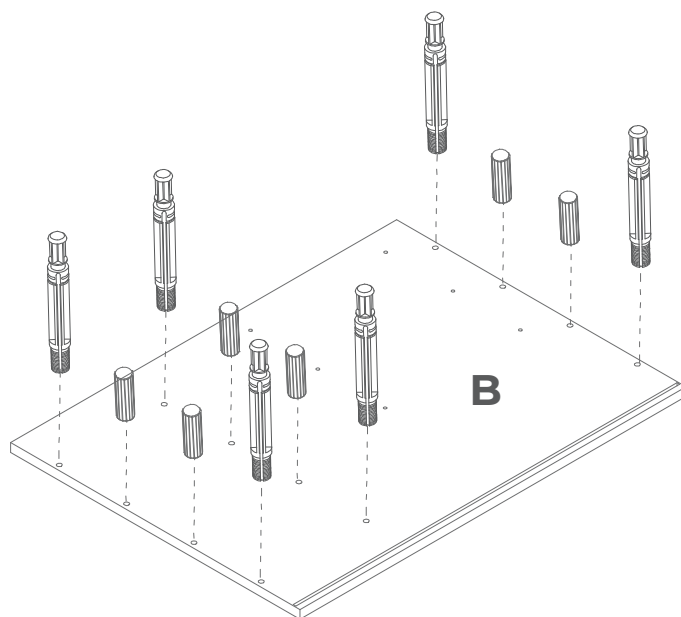



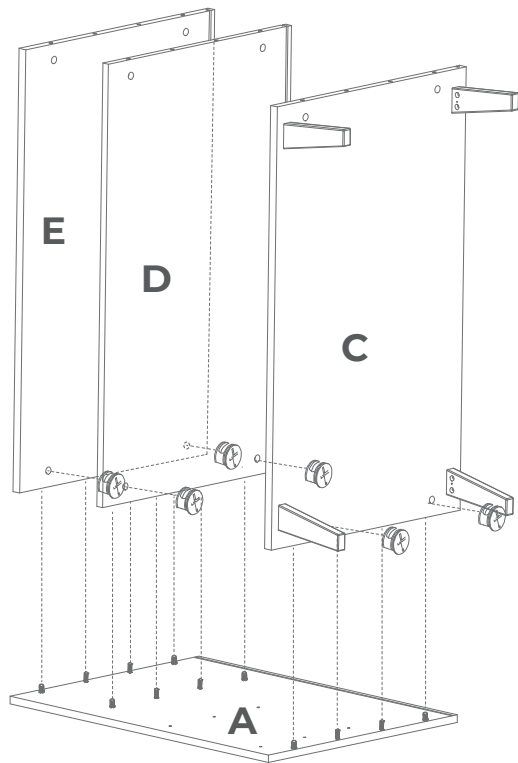
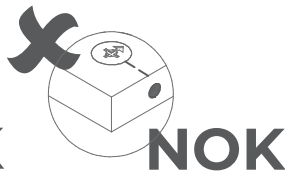


5

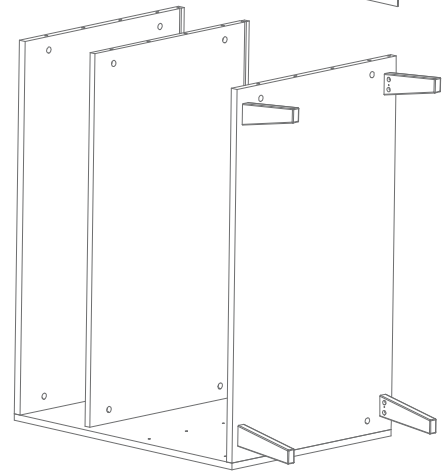
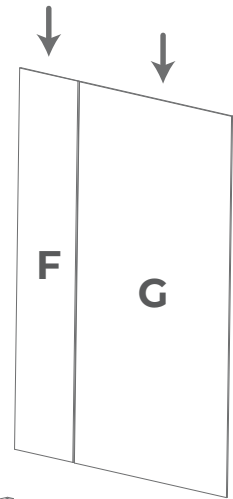


6

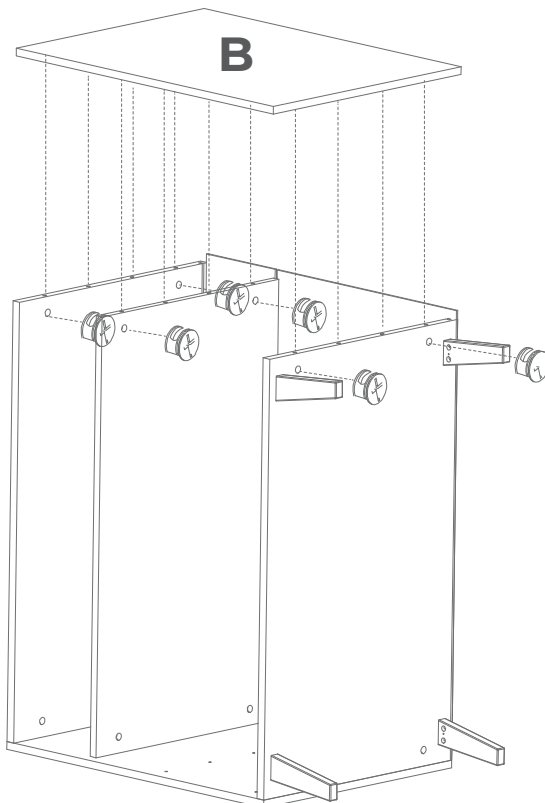


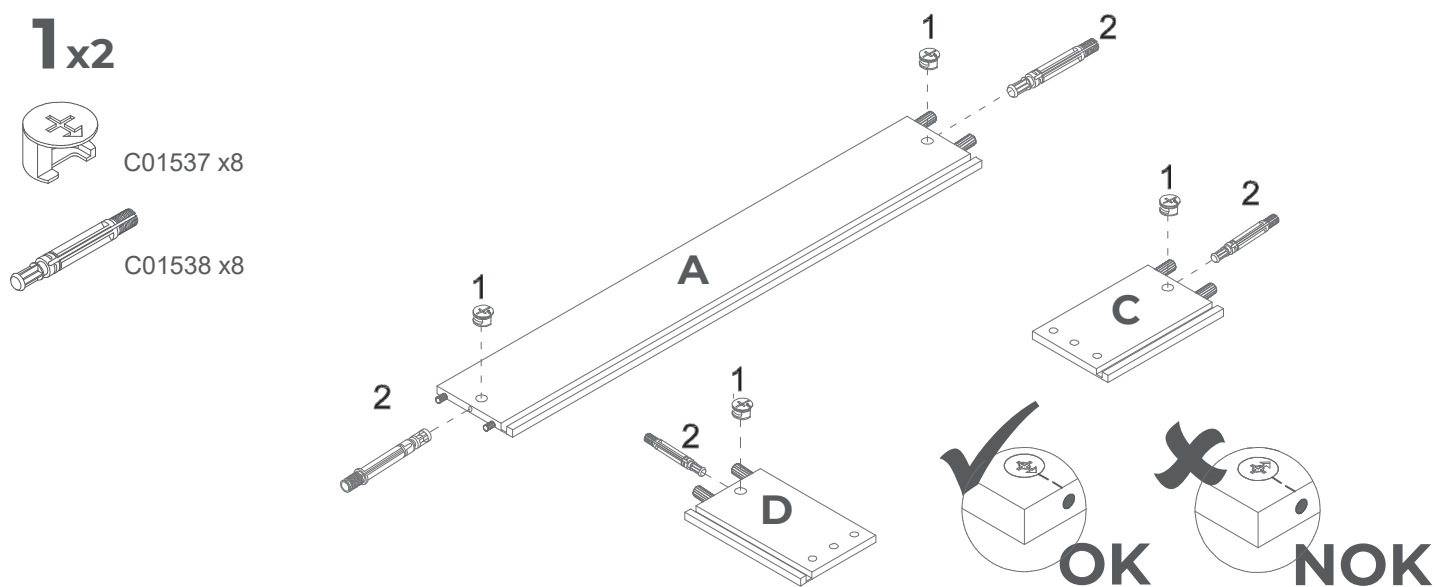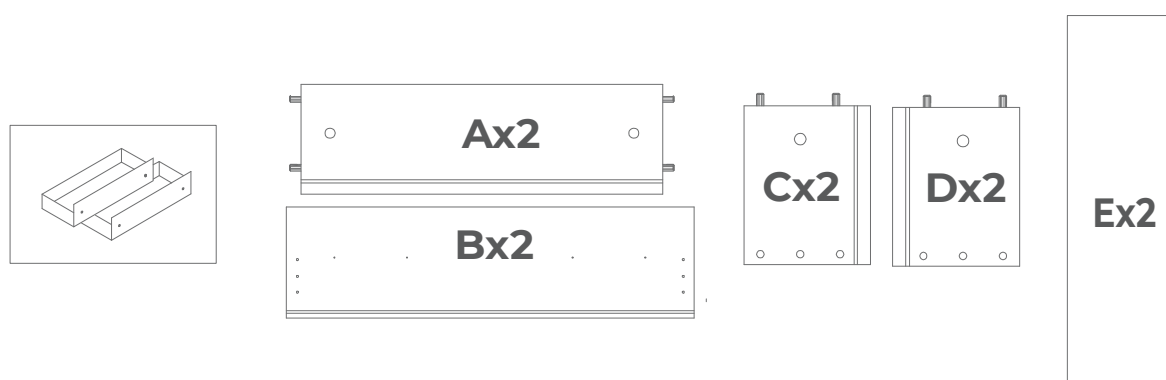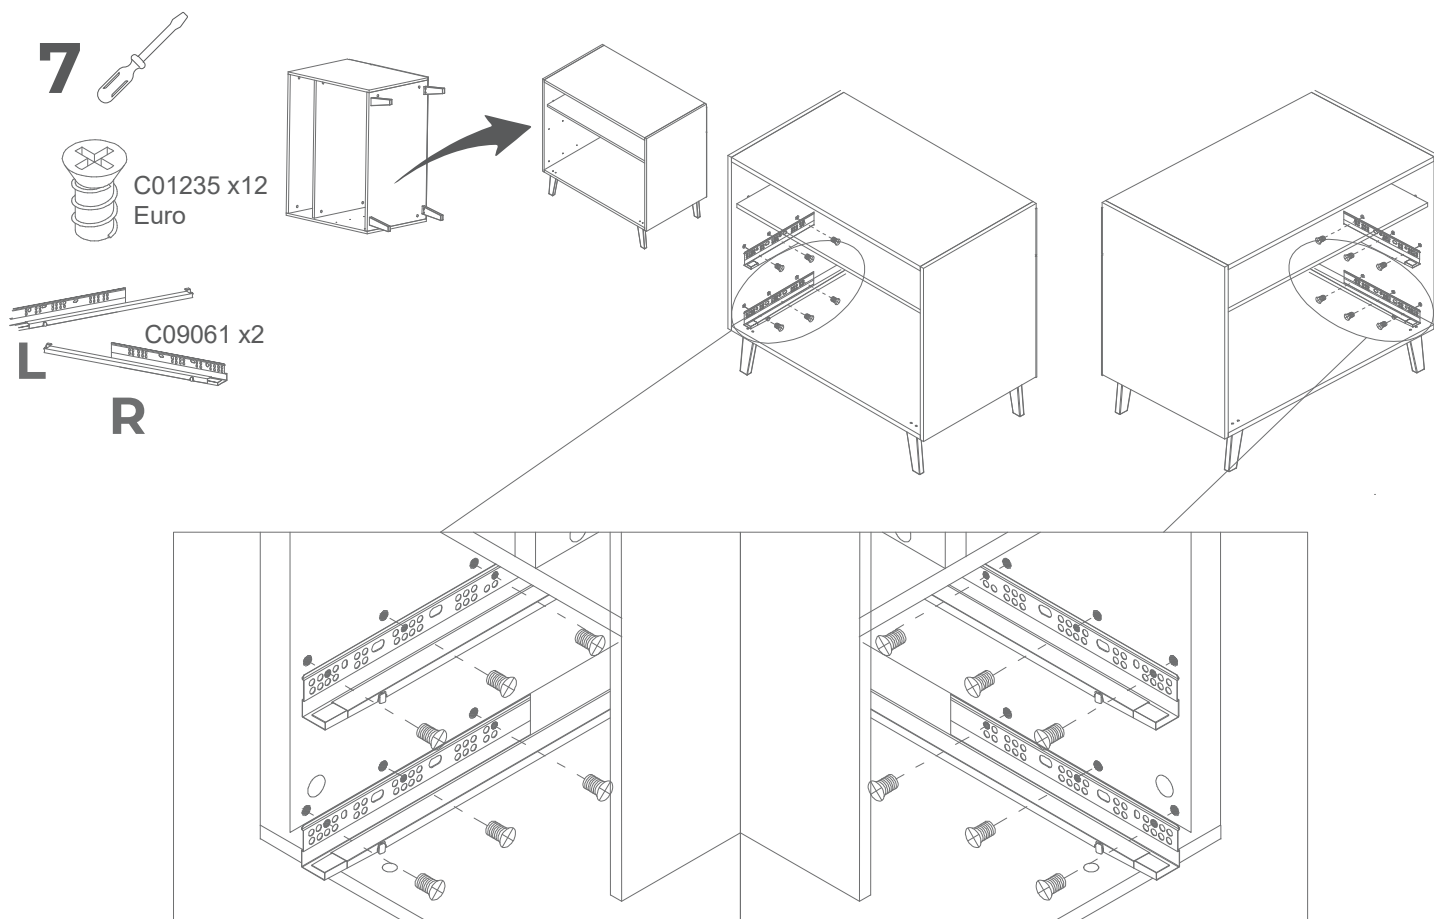


2x2 

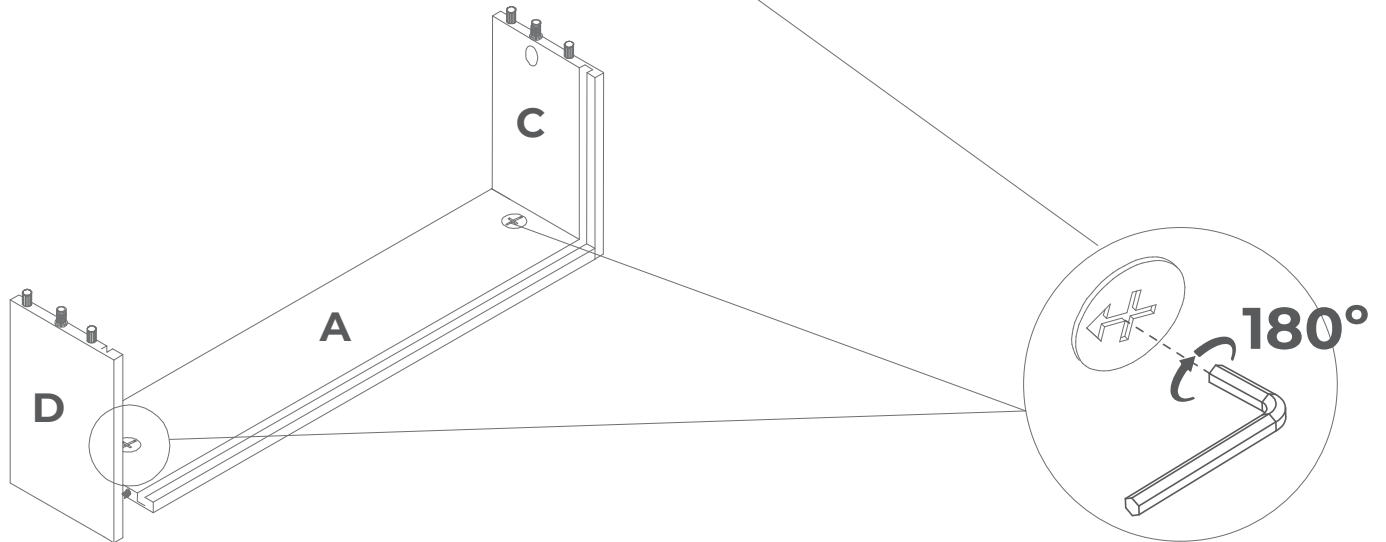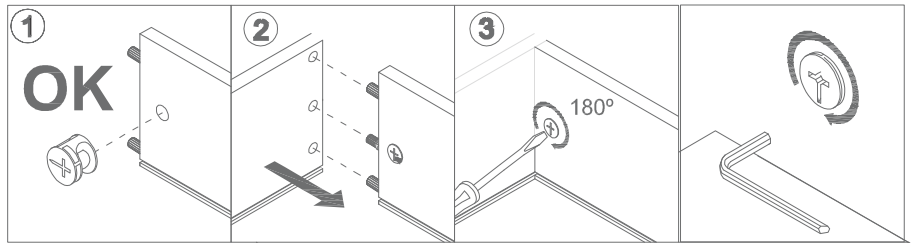


3x2






C14464 x2





C00192 x4





C04790 x4

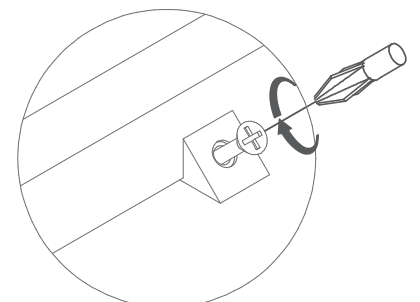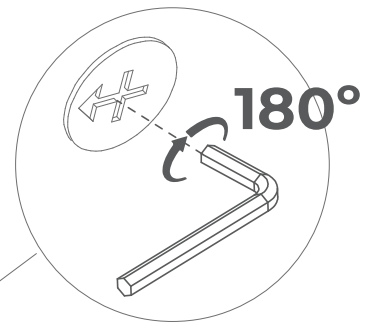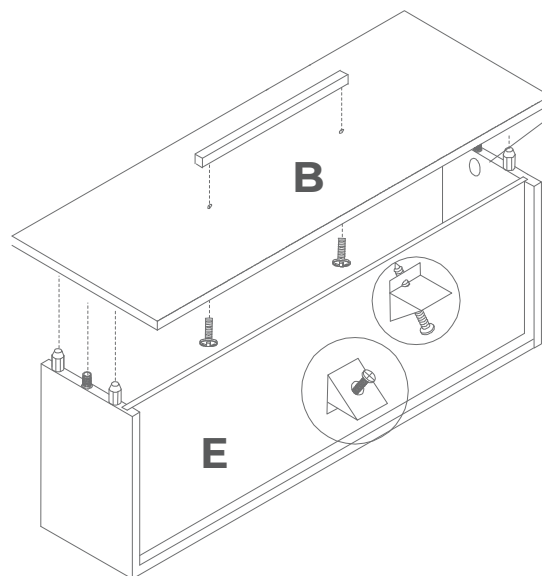


8 

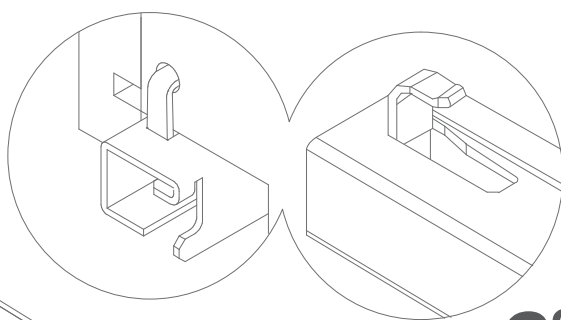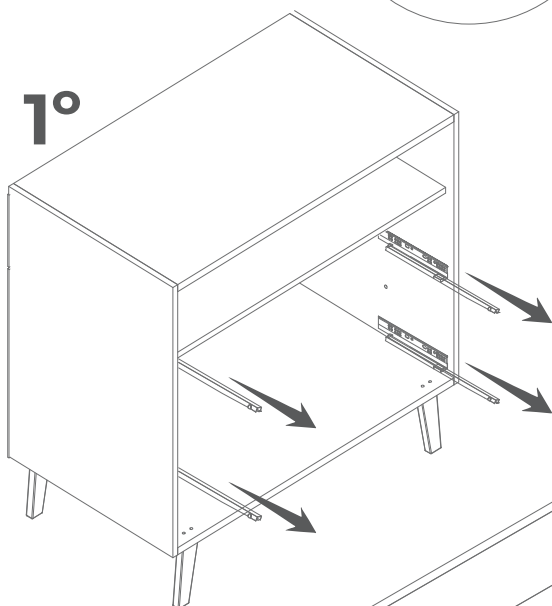


2°

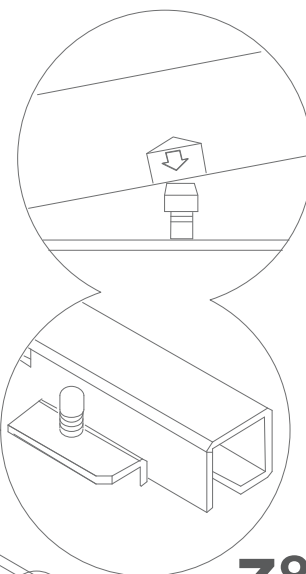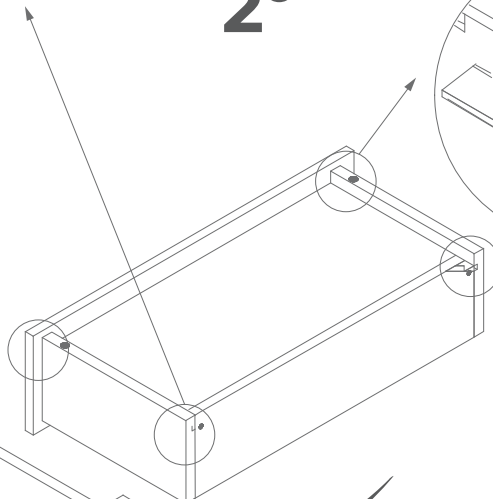

3°



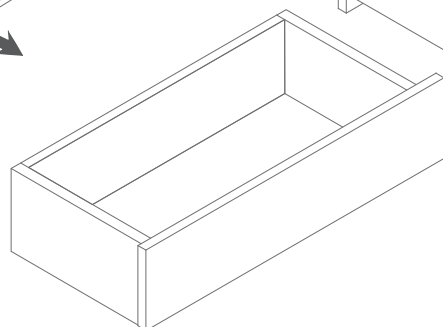


**20kg max.
por cajón**

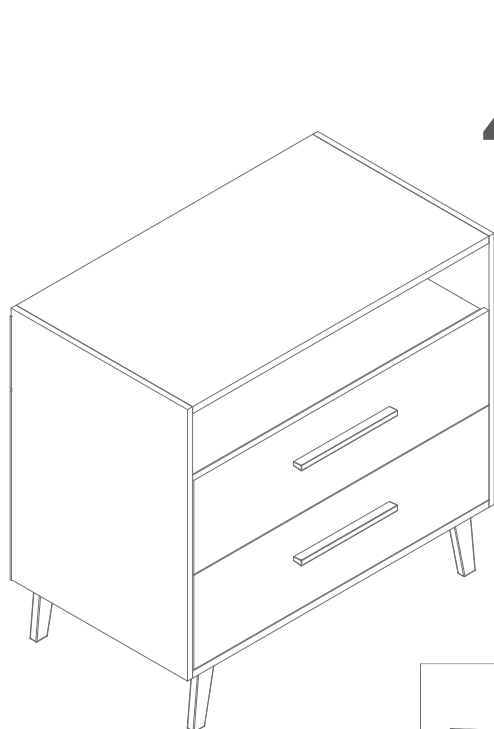

4°



Click →

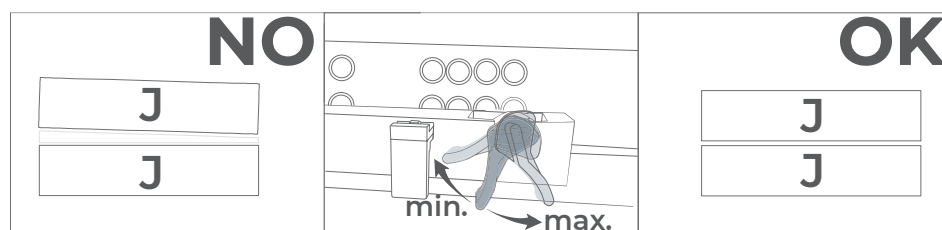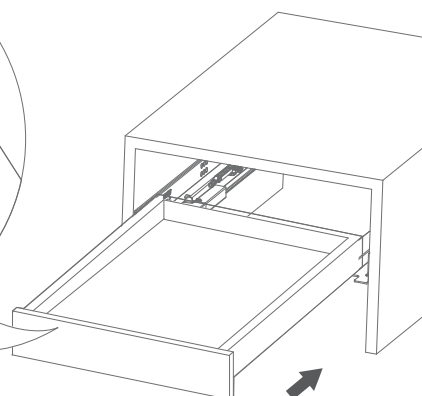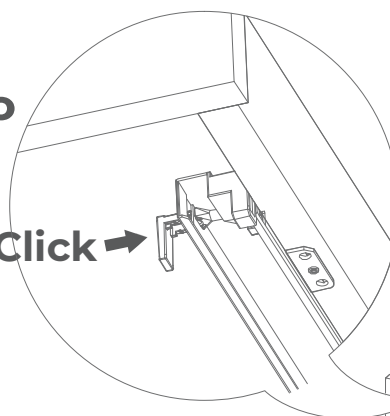

9




C04790 x6

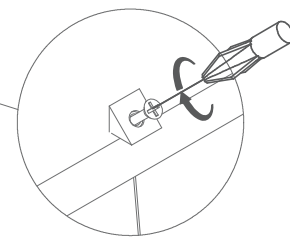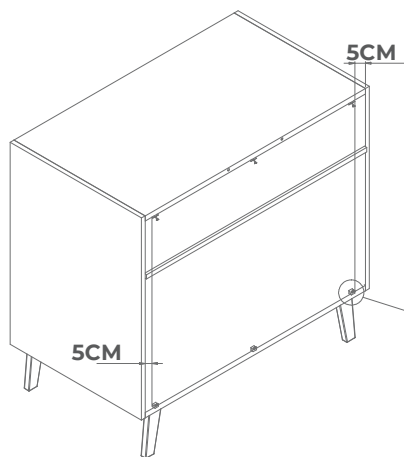

10



C11092 x1




C10392 x1




C00326 x1


1°

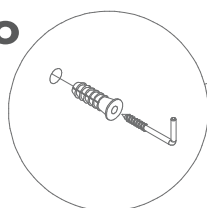






2°

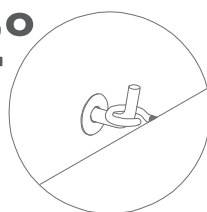

11



C00329 x1

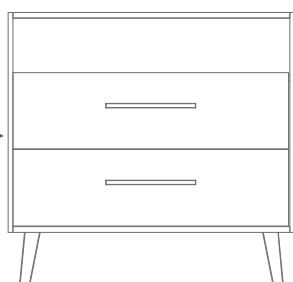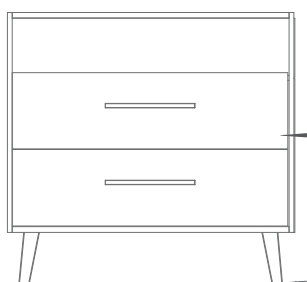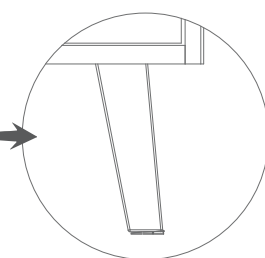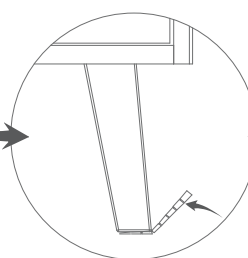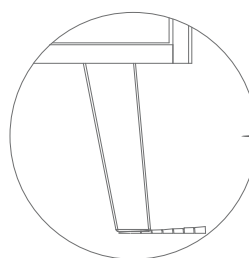

OK!!